# N700E INSTRUCTION MANUAL

#### 1. Installation

## / CAUTION

- Be sure to install the unit on flame resistant material such as metal. Otherwise, there is a danger of fire.
- Be sure not to place anything highly flammable in the vicinity. Otherwise, there is a danger of fire.
- Do not carry unit by top cover, always carry by supporting base of unit. There is a risk of falling and injury.
- Be sure not to let foreign matter enter inverter such as cut wire refuse, spatter from welding, iron refuse, wire, dust, etc.
   Otherwise, there is a danger of fire.
- Be sure to install inverter in a place which can bear the weight according to the specifications in the text. (Chapter 2. Installation)
   Otherwise, it may fall and there is a danger of injury.
- Be sure not to install and operate an inverter which is damaged or has parts which are missing.
   Otherwise, there is a danger of injury.
- Be sure to install the inverter in an area which is not exposed to direct sunlight and is well ventilated. Avoid environments which tend to be high in temperature, high in humidity or to have dew condensation, as well as places with dust, corrosive gas, explosive gas, highly flammable gas, grinding-fluid mist, salt damage, etc.
   Otherwise, there is a danger of fire.

#### 2. Wiring

## / WARNING

- Be sure to ground the unit.
  - Otherwise, there is a danger of electric shock and/or fire.
- Wiring work should be carried out by qualified electricians.
   Otherwise, there is a danger of electric shock and/or fire.
- Implement wiring after checking that the power supply is off. Otherwise, there is a danger of electric shock and/of fire.
- After installing the main body, carry out wiring.
   Otherwise, there is a danger of electric shock and/or injury.

## / CAUTION

- Make sure that the input voltage is: Three phase 200 to 240V 50/60Hz Three phase 380 to 480V 50/60Hz
- Be sure not to single phase the input.
- Otherwise, there is a danger of fire.
- Be sure not to connect AC power supply to the output terminals(U, V, W). Otherwise, there is a danger of injury and/or fire and/or damage to unit.
- Be sure not to connect a resistor to the DC terminals(P, RB) directly. Otherwise, there is a danger of fire and/or damage to unit.
- Be sure to install an earth leakage breaker or the fuse(s) which is(are) the same phase as the main power supply in the operation circuit.
  - Otherwise, there is a danger of fire and/or damage to unit.
- As for motor leads, earth leakage breakers, and electromagnetic contactors, be sure to use equivalent ones with the specified capacity(rated).
  - Otherwise, there is a danger of fire and/or damage to unit.
- Do not stop operation by switching off the electromagnetic contactors on the primary or secondary sides of the inverter.
  - Otherwise, there is a danger of injury and/or machine breakage.
- Fasten the screws to the specified torque. Check so that there is no loosening of screws. Otherwise, there is a danger of fire and/or injury to personnel.

## 3. Control and operation

## **!** WARNING

- Be sure to turn on the power supply with the front case is closed.
   While the inverter is energized, be sure not to open the front case.
   Otherwise, there is a danger of electric shock.
- Be sure not to operate the switches with wet hands. Otherwise, there is a danger of electric shock.
- While the inverter is energized, be sure not to touch the inverter terminals even while the unit is not running.
  - Otherwise, there is a danger of electric shock.
- If the retry mode is selected, it may suddenly restart during the trip stop.
   Be sure not to approach the equipment. (Be sure to design the equipment so that personnel safety will be secured even if equipment restarts.)
   Otherwise, there is a danger of injury.
- Even if the power supply is cut for a short period of time, the inverter may restart operation
  after the power supply is restored if the operation command is given.
   If a restart may incur danger to personnel, be sure to make a circuit so that it will not restart
  after power recovery.
   Otherwise, there is a danger of injury.
- The stop key is valid only when a function is on. Ensure that there is a hard wired emergency stop that is separate from the stop key of the inverter.
   Otherwise, there is a danger of injury.
- With the operation command on, if the alarm reset is ordered, the inverter can restart suddenly. Be sure to set the alarm reset after checking the operation command is off. Otherwise, there is a danger of injury.
- Be sure not to touch the inside of the energized inverter or to put a shorting bar into it.
   Otherwise, there is a danger of electric shock and/or fire.

## / CAUTION

- The cooling fins will have a high temperature. Be sure not to touch them. Otherwise, there is a danger of getting burned.
- Low to high speed operation of the inverter can be easily set. Be sure to operate it after checking the tolerance of the motor and machine.
   Otherwise, there is a danger of injury.
- Install an external breaking system if needed.
   Otherwise, there is a danger of injury.
- If a motor is operated at a frequency outside of the standard setting value (50Hz/60Hz), be sure to check the speeds of the motor and the equipment with each manufacturer, and after getting their consent, operate them.
  - Otherwise, there is a danger of equipment breakage.
- Check the following before and during the test run.
  - Was the direction of the motor correct?
  - Did the inverter trip for on acceleration or deceleration?
  - Were the RPM and frequency motor correct?
  - Were there any abnormal motor vibrations or noises?
  - Otherwise, there is a danger of machine breakage.
- The AC reactor must be installed When the power is not stable. if not, inverter can be broken.

## 4. Maintenance, inspection and part replacement

## **MARNING**

- After turning off the input power supply, do not perform the maintenance and inspection for at least 10 minutes.
  - Otherwise, there is a danger of electric shock.
- Make sure that only qualified persons will perform maintenance, inspection and/or part replacement.
  - (Before starting the work, remove metallic objects(wristwatch, bracelet, etc.) from a worker. (Be sure to use insulated tools.) Otherwise, there is a danger of electric shock and/or injury.

#### 5. Others

## **MARNING**

Never modify the unit.
 Otherwise, there is a danger of electric shock and/or injury.

## **CONTENTS**

1. GENERAL DESCRIPTION	<u></u> 1
2. Installation and Wiring	1
Operation	16
Parameter Code List.	
3. Using intelligent terminals	
4. Protective function	
5. Troubleshooting Tips	
6. Maintenance and Inspection.	
7. RS485 Communication (Option)	1
8. Specification.	1

## 1. GENERAL DESCRIPTION

## 1.1 Inspection upon Unpacking

#### 1.1.1 Inspection of the unit

Please open the package, remove the inverter, please check the following items. If you discover any unknown parts or the unit is damaged, please contact HYUNDAI.

- (1) Make sure that the package contains one operation manual for the inverter.
- (2) Make sure that there was no damage (broken parts in the body) during transportation of the unit.
- (3) Make sure that the product is the one you ordered by checking the label specification.

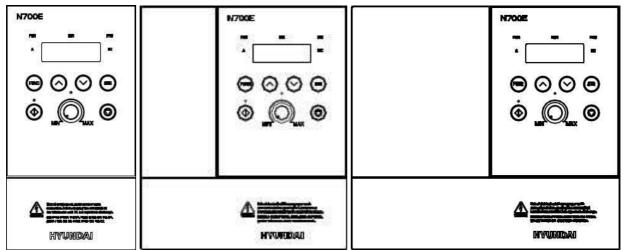


Fig1-1 Outlook of N700E Inverter (1frame, 2frame, 3frame)

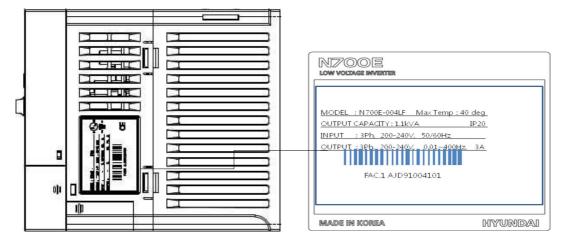


Fig1-2 Contents of Specification label

#### 1.1.2 Instruction manual

This instruction manual is the manual for the N700E inverters.

Before operation of the inverter, read the manual carefully. After reading this manual, keep it on

hand for future reference

## 1.2 Questions and Warranty of the Unit

#### 1.2.1 Questions on Unit

- If you have any questions regarding damage to the unit, unknown parts or for general inquiries, please contact your LOCAL HYUNDAI BRANCH with the following information.
- (1) Inverter Model
- (2) Production Number (Serial No.)
- (3) Date of purchase
- (4) Reason for Calling
  - 1 Damaged part and its condition etc.
  - 2 Unknown parts and their contents etc

#### 1.2.2 Warranty for the unit

- The warranty period of the unit is one year after the purchase date. However the warranty will be void if the fault is due to;
  - 3 Incorrect use as directed in this manual, or attempted repair by unauthorized personnel.
  - 4 Any damage sustained other than from transportation (Which should be reported immediately).
  - 5 Using the unit beyond the limits of the specifications.
  - 6 Natural Disasters : Earthquakes, Lightning, etc
- The warranty is for the inverter only, any damage caused to other equipment by malfunction of the inverter is not covered by the warranty.
- Any examination or repair after the warranty period (one-year) is not covered. And within the warranty period any repair and examination which results in information showing the fault was caused by any of the items mentioned above, the repair and examination costs are not covered. If you have any questions regarding the warranty, please contact either your Local HYUNDAI Branch.

## 1.3 Appearance

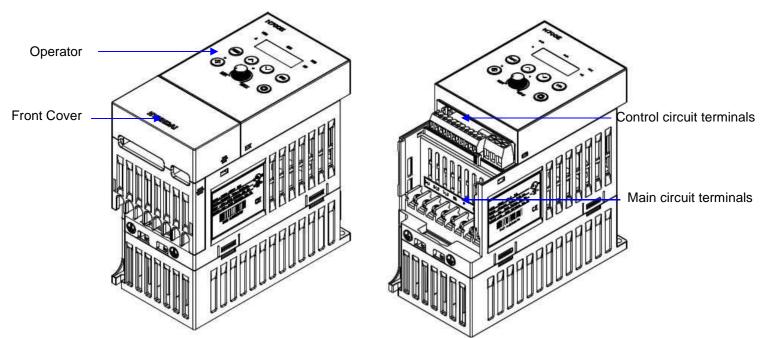


Fig1-3 Outlook of N700E Inverter (1frame)

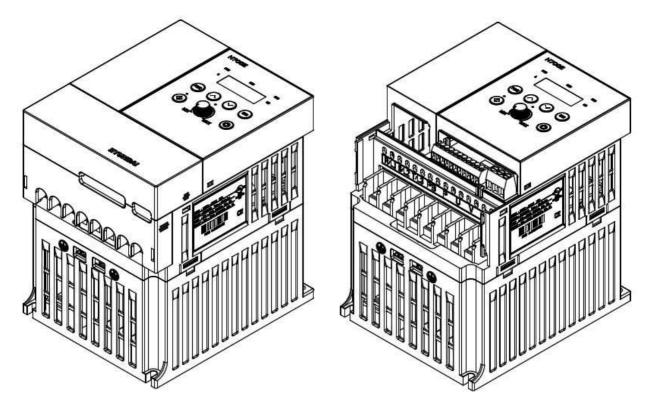


Fig1-4 Outlook of N700E Inverter (2frame)

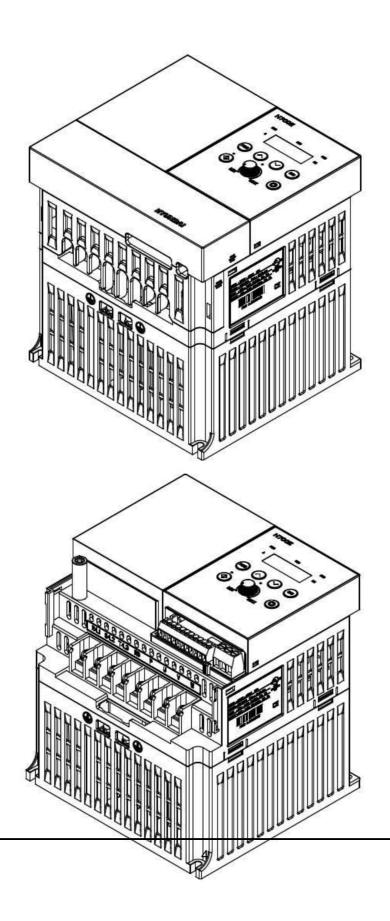


Fig1-5 Outlook of N700E Inverter (3frame)

## 2. Installation and Wiring

#### 2.1 Installation

## **A**CAUTION

- Be sure to install the unit on flame resistant material such as metal.
   Otherwise, there is a danger of fire.
- Be sure not to place anything flammable in the vicinity. Otherwise, there is a danger of fire.
- Do not carry the unit by the top cover, always carry by supporting the base of unit. There is a risk of falling and injury.
- Be sure not to let foreign matter enter such as cut wire refuse, spatter from welding, iron refuse, wire, dust, etc.
   Otherwise, there is a danger of fire.
- Be sure to install the inverter in a place which can bear the weight according to the specifications in the text.
   Otherwise, it may fall and result in possible injury.
- Be sure not to install and operate an inverter which is damaged or parts of which are missing.
  - Otherwise, there is a danger of injury.
- Be sure to install the inverter in an area which is not exposed to direct sunlight and is well ventilated. Avoid environments which tend to be high in temperature, high in humidity or to have dew condensation, as well as places with dust, corrosive gas, explosive gas, inflammable gas, grinding-fluid mist, salt damage, etc.
  - Otherwise, there is a danger of fire.

#### 2.1.1 Installation

#### (1) Transportation

This inverter has plastic parts. So handle with care.

Do not over tighten the wall mounting fixings as the mountings may crack, causing is a risk of falling. Do not install or operate the inverter if there appears to be damaged or parts missing.

#### (2) Surface for the mounting of inverter

The temperature of the inverter heatsink can rise very high.

The surface, to which the inverter will be mounted, must be made of a non-flammable material (i.e steel) due to the possible risk of fire. Attention should also be made to the air gap surrounding the inverter. Especially, when there is a heat source such as a breaking resistor or reactor.

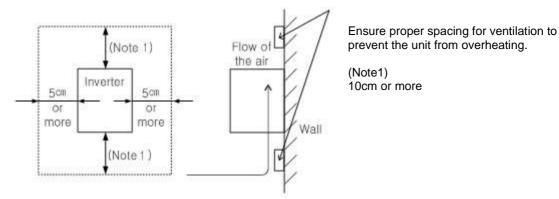


Fig 2- Surface for the mounting of inverter

#### (3) Operating Environment-Ambient Temperature

The ambient temperature surrounding the inverter should not exceed the allowable temperature range (-10 to 40°C).

The temperature should be measured in the air gap surrounding the inverter, shown in the diagram above. If the temperature exceeds the allowable temperature, component life will become shortened especially in the case of the Capacitors.

#### (4) Operating Environment-Humidity

The humidity surrounding the inverter should be within the limit of the allowable percentage range (20% to 90% / RH).

Under no circumstances should the inverter be in an environment where there is the possibility of moisture entering the inverter.

Also avoid having the inverter mounted in a place that is exposed to the direct sunlight.

#### (5) Operating Environment-Air

Install the inverter in a place free from dust, corrosive gas, explosive gas, combustible gas, mist of coolant and sea damage.

#### (6) Mounting Position

Mount the inverter in a vertical position using screws or bolts. The mounting surface should also be free from vibration and can easily hold the weight of the inverter.

#### (7) Ventilation within an Enclosure

If you are installing one or more inverters in an enclosure a ventilation fan should be installed. Below is a guide to the positioning of the fan to take the airflow into consideration. The positioning of inverter, cooling fans and air intake is very important.

#### N700E INSTRUCTION MANUAL

If these positions are wrong, airflow around the inverter decreases and the temperature surrounding the inverter will rise. So please make sure that the temperature around is within the limit of the allowable range.

## 2.2 Wiring

## / WARNING

- Be sure to ground the unit.
   Otherwise, there is a danger of electric shock and/or fire.
- Wiring work should be carried out by qualified electricians.
   Otherwise, there is a danger of electric shock and/or fire.
- Implement wiring after checking that the power supply is off.
   Otherwise, there is a danger of electric shock and/of fire.
- After mounting the inverter, carry out wiring.
   Otherwise, there is a danger of electric shock and/or injury.

## **⚠** CAUTION

- Be sure not to power a three-phase-only inverter with single phase power. Otherwise, there is a danger of fire.
- Be sure not to connect AC power supply to the output terminals(U, V, W). Otherwise, there is a danger of injury and/or fire and/or damage to unit.
- Be sure to set a earth leakage breaker or the fuse(s) which is(are) the same phase as the main power supply in the operation circuit.
   Otherwise, there is a danger of fire and/or damage to unit.
- As for motor leads, earth leakage breakers, and electromagnetic contactors, be sure to use equivalent ones with the specified capacity(rated).
   Otherwise, there is a danger of fire and/or damage to unit..
- Do not stop operation by switching off the electromagnetic contactors on the primary or secondary sides of the inverter.
   Otherwise, there is a danger of injury and/or machine breakage.

5

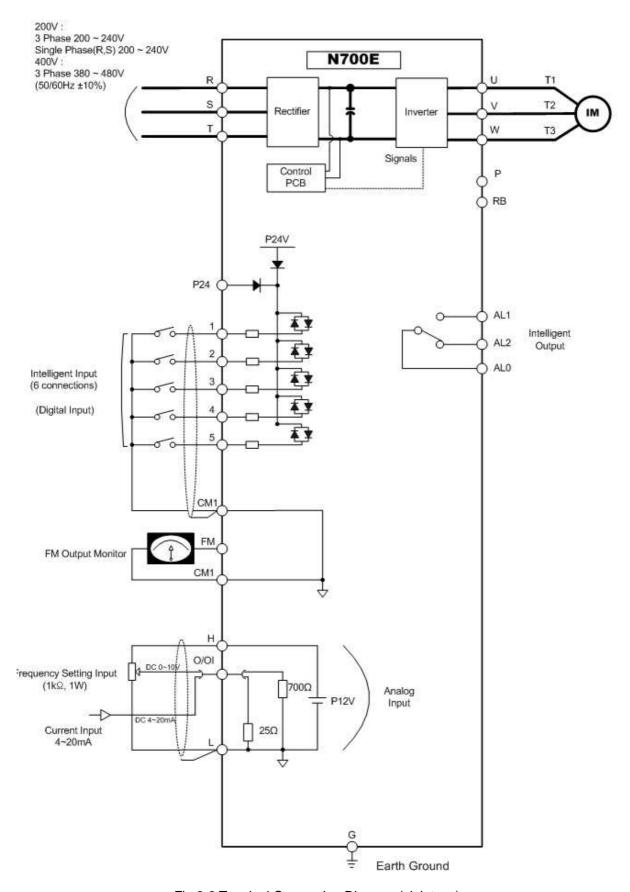


Fig.2-3 Terminal Connection Diagram (sink type)

(1) Explanation of main circuit Terminals

Symbol	Terminal Name	Explanation of contents
R,S,T (R,S)	Main power	Connect alternating power supply.
U,V,W	Inverter output	Connect three-phase motor.
P, RB	External braking resistor	Connect optional External braking resistor.
G	Inverter earth terminals	Grounding terminal.

Table 2-1 Explanation of main circuit terminals

(2) Control circuit Terminals

Signal	Terminal Symbol	Terminal name	Terminal function
	P24	Interface power	24VDC ±10%, 35mA
	5 (FRS)	Intelligent Input Terminal	Contact innut.
	4 (CF2)	Forward run command(FW), Reverse run command(RV),	Contact input : Close : ON (operating)
Input	3 (CF1)	multi-speed commands1-4(CF1-4), 2-stage accel/decel (2CH),	Open : OFF(stop)
signal	2 (RV)	Reset(RS), Terminal software lock(SFT), Unattended start protection(USP) (Note2),	Minimum ON
	1 (FW)	Free run stop(FRS), Jogging operation(JG), External trip(EXT)	TIME :12ms or more
	CM1	Common terminal for input or monitor signal	
Monitor signal	FM	Analog Monitor (Frequency, Current, Voltage)	Analog Frequency Meter
	Н	Frequency power	10VDC
Frequ ency comm and signal	O/OI	Frequency command power terminal (voltage) Frequency command terminal (current)	0-10VDC, Input Impedance 10kΩ  4-20mA, Input Impedance 210Ω
o.g. i.a.	L	Analog power common	
Intelligent Output signal	AL0 AL1 AL2	Intelligent output signals : at normal status, power off : AL0-AL2 (closed) at abnormal status : AL0-AL1(closed)  AL0 AL1 AL2	Contact rating: AC 250V 2.5A (resistor load) 0.2A (inductor load) DC 30V 3.0A (resistor load) 0.7A (inductor load)

Table2-2 Control circuit Terminals

#### 2.2.2 Main circuit wiring

(1) Warning on wiring

When carrying out work on the inverter wiring make sure to wait for at least ten minutes before you remove the cover. Be sure to verify that the charge lamp is not illuminated.

A final check should always be made with a voltage meter.

After removing the power supply, there is a time delay before the capacitors will dissipate their charge.

- 1 Main power terminals (R, S and T)
- Connect the main power terminals (R, S and T) to the power supply through an electromagnetic contactor or an earth-leakage breaker.
  - N700 recommends connecting the electromagnetic contactor to the main power terminals, because when the protective function of the inverter operates, it isolates the power supply and prevents the spread of damage and accident.
- This unit is for a three-phase power supply. Be sure not to power a three-phase only inverter
  with single phase power. Otherwise, there is the possibility of damage to the inverter and the
  danger of fire.
- If you require a single phase power supply unit, please contact your local HYUNDAI Branch.
- The inverter enters into the following condition at the occurrence of open phase if it is selected open phase protection is valid:
  - R phase, S phase or T phase, open phase condition:
     It becomes single-phase operation condition. Trip operation, such as a deficiency voltage or over current, may occur.
- Don't use it under open phase condition. A converter module may be damaged as a result of the following conditions. Use caution when
  - an unbalance of the power supply voltage is more than 3%
  - Power supply capacity is more than 10 times of the capacity of inverter and case beyond 500kVA.
  - A drastic change in the power supply

(Example) Turning on/off of the power supply should not be done more than three times in one minute. It has the possibility of damaging the inverter.

- 2 Inverter output terminals (U, V, and W)
- Using a heavier gauge wire can prevent the voltage drop.
  - Particularly when outputting low frequencies, the torque of the motor will be reduced by the voltage drop of the wire.
  - Do not install power factor correction capacitors or a surge absorber to the output.
  - The inverter will trip or sustain damage to the capacitors or the surge absorber.
- In the case of the cable length being more than 65 feet, it is possible that a surge voltage will be generated and damage to the motor is caused by the floating capacity or the inductance in the wire. When an EMC filter is to be installed, please contact your local HYUNDAI branch.
- In the case of two or more motors, install a thermal relay to each motor.
- Make the RC value of the thermal relay the value of 1.1 times of motor rated electric current.
- 3 External braking resistor connection terminals (P, RB)
- The regenerative braking circuit (BRD) is built-in as standard
- When braking is required, install an external-braking resistor to these terminals.
- The cable length should be less than 16 feet, and twist the two connecting wires to reduce inductance.
  - Do not connect any other device other than the external braking resistor to these terminals.
- When installing an external braking resistor make sure that the resistance is correctly rated to limit the current drawn through the BRD.
- 4 Earth Ground (G)
- Make sure that you securely ground the inverter and motor for prevention of electric shock.
- The inverter and motor must be connected to an appropriate safety earth ground and follow all

local electrical codes.

• In case connecting 2 or more inverters, use caution not to use a loop which can cause some malfunction of the inverter.

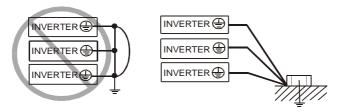


Fig. 2- 4 Earth Ground (G)

## (2) Wiring of main circuit terminals

The wiring of main circuit terminals for the inverter are in the following pictures.

Wiring of terminals	Corresponding type	Screw Size	Width (mm)
R S RB P U V W	N700E-004SF N700E-007SF	МЗ	7.62
R S T RB P U V W	N700E-004LF N700E-007LF N700E-015LF	МЗ	7.62
R S RB P U V W	N700E-015SF N700E-022SF	M4	11
R S T RB P U V W	N700E-022LF N700E-037LF N700E-004HF N700E-007HF N700E-015HF N700E-022HF N700E-037HF	M4	11

Table 2-3 Wiring of main circuit terminals

(1)

(2)

(3)

(4)

#### (3) Applicable Tools

Power Supply 3 Phase Fuse o M/C R S T L1 L2 L3 Inverter P RB T1 T2 T3 W

Note1: The applicable equipment is for HYUNDAI standard four pole squirrel cage motor.

Note2: Be sure to consider the capacity of the circuit breaker to be used. Note3: Be sure to use larger wire for power lines if the distance exceeds 20m. Note4: Be sure to use an grounding wire same size of power line or similar.

Note5: Use 0.75mm²for AL relay.

Separate by the sum(wiring distance from inverter to power supply, from inverter to motor for the sensitive current of leakage breaker (ELB)

Wiring distance	Sensitive Current(mA)
100m and less	50
300m and less	100

Table2-4 Sensitive current according to wiring distance Note6: When using CV line and wiring by rigid metal conduit, leak flows.

Note7: IV line is high dielectric constant. SO the current increase 8 times.

Therefore, use the sensitive current 8 times as large as that of the left list. And if the distance of wire is over 100m, use CV line.

		Name	Function			
(5)	(1)	Input reactor (harmonic control, electrical coordination, power-factor improvement)	This part is used when the unbalance voltage rate is 3% or more and power supply is 500 kVA or more, and there is a rapid change in the power supply. It also improves the power factor.			
	(2)	Noise filter for Inverter	This part reduces common noise generated between the power supply and the ground, as well as normal noise. Put it in the primary side of inverter.			
(6)	(3)	Radio noise filter (zero-phase reactor)	Using the inverter may cause noise on the peripheral radio through the power lines. This part reduces noise.			
(7)	(4) Input radio noise filter (capacitor filter)		This part reduces radiation noise emitted from wire at the input.			
(8)	(5) Breaking resistor Regenerative breaking unit		This part is used for applications that need to increase the brake torque of the inverter or to frequently turn on and off and to run hig inertia load.			
	(6) Output noise filter		This part reduces radiation noise emitted from wire by setting between inverter and motor. And it reduces wave fault to radio and TV, it is used for preventing malfunction of sensor and measuring instruments.			
	(7) Radio noise filter (Zero-phase reactor)		This part reduces noise generated at the output of the inverter.  (It is possible to use for both input and output.)			
	Output alternation reactor Reducing vibration, thermal Relay, preventing Misapplication		Running motors with the inverter generates vibration greater than that with commercial power supply. This part installed between the inverter and motor reduces torque ripple. When the cable length between the inverter and motor is long (10m or more), a countermeasure for a malfunction of the thermal relay by harmonic due to switching on inverter is taken by inserting reactor.  There is the way to use current sensor in stead of thermal relay.			
		LCR filter	Sine-wave filter at the output.			

N700E INSTRUCTION MANUAL
Table 2-5 Optional accessories for improved performance
12

#### (4) Common applicable tools

	Motor Output kW(HP)	Inverter model	lines	External resister	Screw	Арј	olicable	Tools	
Class				between P and RB (mm²)	size of Terminal	Torque (N•m)	Leak breaker (MCCB)		Electro- magnetic Controller (MC)
	0.4	N700E-004SF	1.25		M3	0.5	HBS-33	5A	HMC 10W
	0.4	N700E-004LF	1.25		M3	0.5	HBS-33	5A	HMC 10W
	0.75	N700E-007SF	1.25		M3	0.5	HBS-33	10A	HMC 10W
	0.75	N700E-007LF	1.25		M3	0.5	HBS-33	10A	HMC 10W
200V Class	1.5	N700E-015SF	2		M4	1.2	HBS-33	15A	HMC 10W
	1.5	N700E-015LF	2		M3	0.5	HBS-33	15A	HMC 10W
	2.2	N700E-022SF	2		M4	1.2	HBS-33	20A	HMC 20W
	2.2	N700E-022LF	2		M4	1.2	HBS-33	20A	HMC 20W
	3.7	N700E-037LF	3.5		M4	1.2	HBS-33	30A	HMC 20W
	0.4	N700E-004HF	1.25		M4	1.2	HBS-33	5A	HMC 10W
	0.7	N700E-007HF	1.25		M4	1.2	HBS-33	5A	HMC 10W
400V Class	1.5	N700E-015HF	1.25		M4	1.2	HBS-33	10A	HMC 10W
	2.2	N700E-022HF	1.25		M4	1.2	HBS-33	10A	HMC 10W
	3.7	N700E-037HF	2.0		M4	1.2	HBS-33	15A	HMC 20W

Table 2-6 Common applicable tools for N700E inverters

#### 2.2.3 Terminal connection diagram

- (1) Terminal connection diagram
  - 5 The control circuit terminal of inverters is connected with the control board in unit.


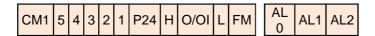


Fig 2-4 Terminal connection diagram

- (2) Wiring
  - 6 Both the CM1 and L terminals are insulated to both the common terminal of the input and output signals. Do not short or connect to ground these common terminals.
  - 7 Use twisted screened cable, for the input and output wires of the control circuit terminals. Connect the screened cable to the common terminal.
  - 8 Limit the connection wires to 65 feet.
  - 9 Separate the control circuit wiring from the main power and relay control wiring.

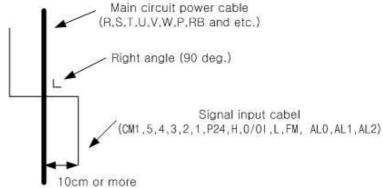

- 10 When using relays for the FW terminal or an intelligent input terminal use a control relay that is designed to work with 24Vdc.
- 11 Do not short the analog voltage terminals H and L or the internal power terminals PV24 and all CM1's. Otherwise there is risk of Inverter damage.

- (3) Change of input logic type
- Selection switch
  - ① SINK/SOURCE TYPE
  - J1,J2: SINK/SOURCE TYPE selection switch.
  - ② The connection to the input programmable logic controller

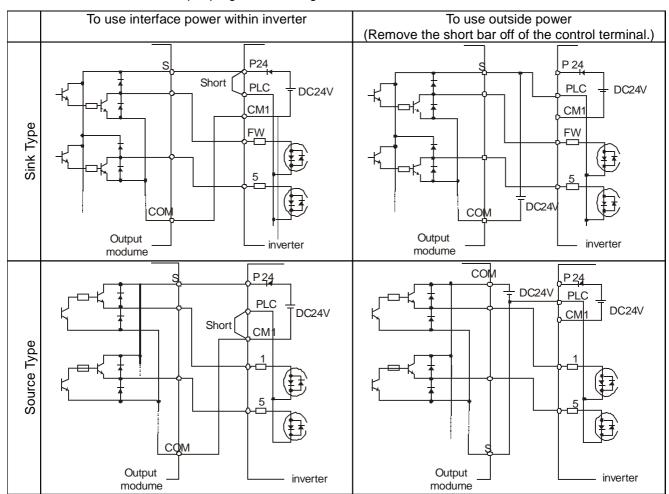


Fig 2-6 Input terminal and PLC connection

## **Operation**

## **!** WARNING

- Be sure not to touch the main terminal or to check the signal add or remove wires and/or connectors.
  - Otherwise, there is a danger of electric shock.
- Be sure not to turn the input power supply on until after front case is closed.
   While the inverter is energized, be sure not to remove the front cover.
   Otherwise, there is a danger of electric shock.
- Be sure not to operate the switches with wet hands.
   Otherwise, there is a danger of electric shock.
- While the inverter is energized, be sure not to touch the inverter terminals even while the unit is not running.
  - Otherwise, there is a danger of electric shock.
- If the retry mode is selected, it may suddenly restart during the trip stop.
   Be sure not to approach the equipment. (Be sure to design the equipment so that personnel safety will be secured even if equipment restarts.)
   Otherwise, there is a danger of injury.
- Be sure not to select retry mode for up and down equipment or traveling equipment, because there is an output free-running mode in term of retry.
   Otherwise, there is a danger of injury and/or machine breakage
- Even if the power supply is cut for a short period of time, the inverter may restart
  operation after the power supply is restored if the operation command is given.
   If a restart may incur danger to personnel, be sure to make a circuit so that it will not
  restart after power recovery.
   Otherwise, there is a danger of injury.
- The stop key is valid only when a function is on. Ensure that there is a hard wired emergency stop that is separate from the stop key of the inverter.
   Otherwise, there is a danger of injury.
- With the operation command on, if the alarm reset is ordered, the inverter can restart suddenly. Be sure to set the alarm reset after checking the operation command is off.
   Otherwise, there is a danger of injury.
- Be sure not to touch the inside of the energized inverter or to put a bar into it.
   Otherwise, there is a danger of electric shock and/or fire.

## **A**CAUTION

- The cooling fins will have high temperature. Be sure not to touch them. Otherwise, there is a danger of getting burned.
- Low to high speed operation of the inverter can be easily set. Be sure to operate it after checking the tolerance of the motor and machine.
   Otherwise, there is a danger of injury.
- Install an external breaking system if needed.
   Otherwise, there is a danger of injury.
- If a motor is operated at a frequency higher than standard setting value(50Hz / 60Hz), be sure to check the speeds of the motor and the machine from their manufacturers. After getting their consent, operate them.
   Otherwise, there is a danger of machine breakage.

#### 2.3 Operating

This inverter requires two different signals in order for the inverter to operate correctly. The inverter requires both an operation setting and a frequency setting signal. The following indicates the details of each method of operation and necessary instructions for operation.

#### 2.3.1 Operation setting and a frequency setting by the terminal control

- (1) This is the method which controls the inverter by connecting the control circuit terminals with signals from the outside(the frequency setting, the starting switch etc.).
- (2) The operation is started when the operation setting (FW, REV) is turned ON while the input power is turned ON.
- (Note) The methods of setting the frequency with the terminal are the voltage setting and the current setting. Both are selective. The control circuit terminal list shows necessary things for each setting. The operation setting : switch, relay, etc.
  - 2 The frequency setting: signals from volume or external (DC 0~10V, 4~20mA etc.)

#### 2.3.2 Operation setting and frequency setting with the digital operator.

- (1) This is the method of operation from the digital operator, which is supplied with the inverter as standard, or the optional remote operator keypad (OPE. KEYPAD) and volume (OPE. VOL).
  - (2) When the inverter is being controlled by digital operator, the terminals (FW, REV) are not available. Frequency can be also controlled by digital operator.

## 2.3.3 Operation setting and frequency setting from both the digital operator and the terminal operator

- (1) This is the method of inverter operating from both of the above two operating methods.
  - (2) The operation setting and the frequency setting can be done through the digital operator and the terminal operator.

#### 2.4 Test Run

This is an example of a common connection. Please refer to Digital Operator, for the detailed use of the digital operator.

## 2.4.1 To input the operation setting and the frequency setting from the terminal control

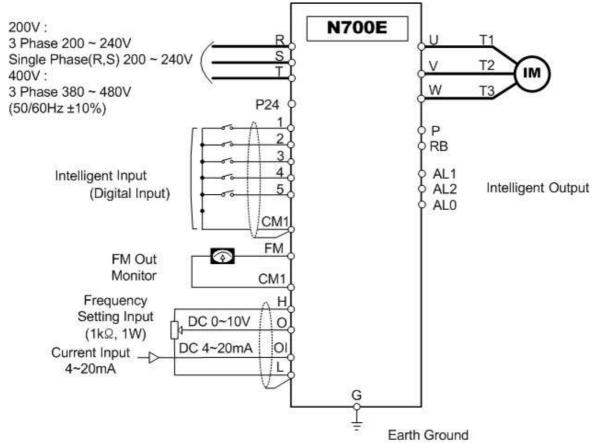


Fig 3-1 Setting diagram from the terminal control

#### (Procedure)

- (1) Please make sure that the connections are secured correctly.
- (2) Turn the MCCB on to supply power to the inverter. (The LED "POWER" on the operator should illuminate)
- (3) Set the terminal with the frequency setting selection.
  - Set A01 as the indication code, press the (FUNC) key once. (Code values are shown)
  - Set 1(Terminal) with (UP/DOWN) key, press the (STR) key once to set the operation setting for the operator.(Indication code turns back to A01.)
- (4) Set terminal with the operation setting selection.
  - Set A02 as indication code, press the (FUNC) key once.
  - Set 1(terminal) with the (UP/DOWN) key, press the (STR) key once to set the operation setting for the operator.(Indication code turns back to A02.)
- (5) Set Monitor mode
  - When monitoring the output frequency, set indication code to d001, and press the (FUNC) key. Or when monitoring the operation direction, set indication code to d04, and press the (FUNC) key.
- (6) Input starting operation setting.
  - Turn ON between [FW] and [CM1] of terminal.
  - Apply voltage [O] and [L] of terminal to start operation.
- (7) Input ending operation setting.
- Turn OFF between [FW] and [CM1] to slowly stop.

#### 2.4.2 Operation setting and the frequency setting from the digital operator

(Remote operator is also same use.)

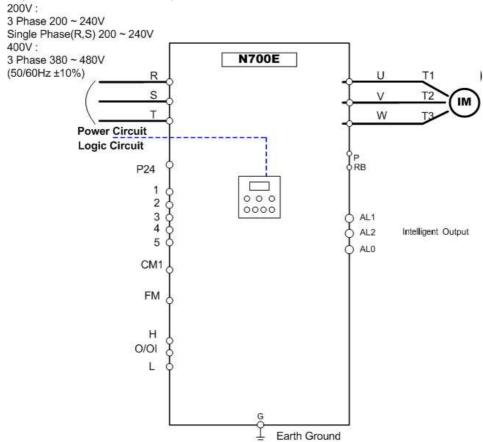


Fig 3-2 Setting diagram from the digital operator

#### (Procedure)

- (1) Please make sure that connection is right.
- (2) Turn the MCCB on to supply power to the inverter. (The LED "POWER" on the operator should illuminate)
- (3) Set the operator with the frequency setting selection.
  - 1 Set A01 as indication code, press the (FUNC) key once. (Code values are shown)
  - 2 Set 2(OPE KEYPAD) with (UP/DOWN) key, press the (STR) key once to set the operation setting for the operator. (Indication code turns back to A01.) [Setting method by OPE-N7]
- (4) Set the operator with the operation setting selection.
  - Set A02 as the indication code, press the (FUNC) key once.
  - Set 2(OPE) with (UP/DOWN) key, press the (STR) key once to set the operation setting for the operator. (Indication code turns back to A02.)
- (5) Set the output frequency
- Set F001 as indication code, by pressing the (FUNC) key once. (Code values are shown.)
- Set to the desired output frequency with the (UP/DOWN) key, press the (STR) key once to store it.
- (6) Set Monitor mode
  - 1 When monitoring the output frequency, set indication code to d001, and press the (FUNC) key once
  - Or when monitoring the operation direction, set indication code to d04, press the (FUNC) key once.
- (7) Press the (RUN) key to start operating.
  - (The "RUN" lamp turns on a light, and the indication changes in response to the monitor mode set.)
- (8) Press the (STOP) key to decelerate to a stop. (When the frequency returns to 0, the RUN lamp light will switch off.).



## **Parameter Code List**

#### 2.5 **About Digital Operator**

#### 2.5.1 Name and contents of each part of Standard-type digital operator

## (1) Part name

## **RUN LED**

on when the inverter outputs the PWM voltage and operating command is ready

#### **POWER LED**

On when the control powerinput to inverter is on

# <u>Display part (LED display)</u> This part display frequency,

motor current, motor rotation speed, alarm history, and setting value.

RUN Key Press this key to run the motor. The Run enable LED must be terminal operation

FUNCTION Key
This key is used for changing parameter and command.

## **UP/DOWN** Key

This key is used to change data and increase of decrease the frequency



Fig.4-1 LED Type Digital Operator

#### **PRG LED**

This LED is on when the inverter is ready for parameter editing.

## Hz LED / A LED

Display units Hertz/Ampere LEDs.

#### Potentiometer

set the inverter output frequency.(be operated only when the ramp is ON)

## **STORE Key**


Press the store key to write the data and setting value to the memory

#### STOP/RESET Key


This key is used for stopping the motor or resetting errors.(When either operator or terminal is selected, this key works. If the extension function b 15 is used, this function is void)

## (3) Operation procedure


1. Example that the frequency is set from potentiometer to the standard operator and the equipment starts running)

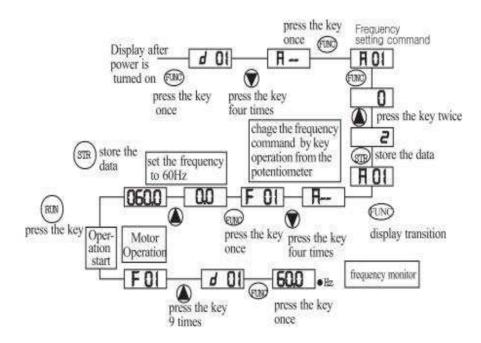

## 2. Key Description

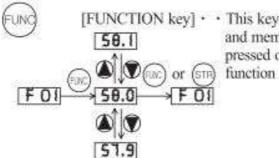

[FUNCTION key] • This key allows the selection of commands and memorises parameters. When the key is pressed once in the state of, the extension function code selection state is set.

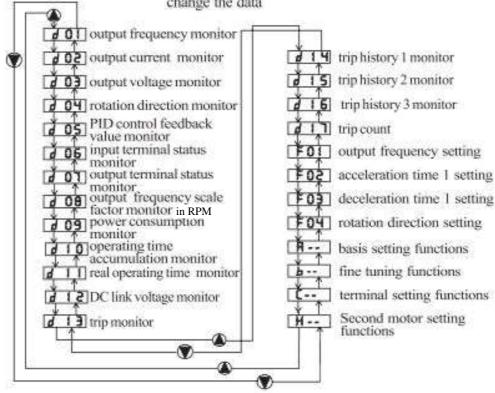

(RUN key] · · This key starts the run,


The set value of F 04 determines a forward run or a reverse run.

[STOP/RESET key] · · This key stops the run

When a trip occurs, this key becomes the reset key.

## 3. Extended function mode navigation map

Using the \( \bigcap \) key to enter the expanded function mode, select expanded function command NO. in \( \bar{H--} \) \( \bar{b--} \) \( \bar{b--} \) \( \bar{b--} \) and \( \bar{H--} \) mode.

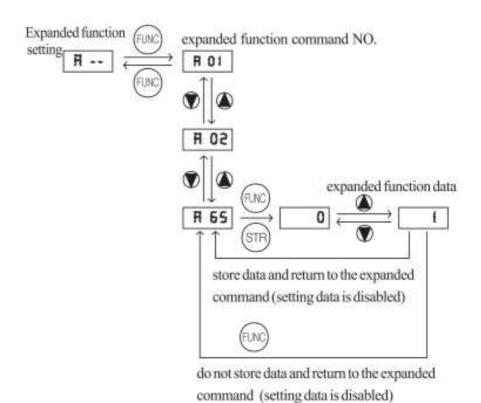

## 4. Display description:

When the inverter is turned on, the output frequency monitor display appears.

## 2.6 Function List

# 2.6.1 Monitor Mode (d-group)

Func- code	Name	Description
d01	Output frequency monitor	Real-time display of output frequency to motor, from 0.00 to 400.0 Hz, "Hz" LED ON
d02	Output current monitor	Real-time display of output current to motor, from 0.0 to 999.9A, "A" LED ON.
d03	Output voltage monitor	Real-time display of output voltage to motor
d04	Rotation direction monitor	Three different indications:  "F" Forward Run  "□" Stop  "r" Reverse Run
d05	PID feedback monitor	Displays the scaled PID process variable (feedback) value (A50 is scale factor)
d06	Intelligent input terminal status	Displays the state of the intelligent input terminals:  ON  OFF  Terminal No. 6 5 4 3 2 1
d07	Intelligent output terminal status	Displays the state of the intelligent output terminals:  ON OFF Terminal No.  AL
d08	RPM output monitor	0 ~ 65530 (RPM) (=120 x d01 x b14) / H04
d09	Power consumption monitor	0 ~ 999.9 (kW)
d10	Operating time accumulation monitor(hour)	0 ~ 9999 (hr)
d11	Real operating time monitor (minute)	0 ~ 59 (min)
d12	DC link voltage	0 ~ 999 (V)

## 2.6.2 Trip & Warning monitor mode (d-group)

Func- code	Name	Description
d13	Trip event monitor	Displays the current trip event  Display method  Alarm reason  ↓ press the UP key  Output frequency at alarm event  ↓ press the UP/DOWN key  Output current at alarm event  ↓ press the UP/DOWN key  DC link voltage at alarm event  ↓ press the FUNC key  "d13" display  No trip event
d14	Trip history 1 monitor	Displays the previous first trip event
d15	Trip history 2 monitor	Displays the previous secound trip event
d16	Trip history 3 monitor	Displays the previous third trip event
d17	Trip count	Displays the trip accumulation count

## 2.6.3 Basic Function Mode

Func- code	Name	Run- time Edit	Description	Defaults
F01	Output frequency setting	0	Standard default target frequency that determines constant motor that deter-mines constant motor speed. units of 0.01Hz setting range is 0.00 to 400.0Hz. frequency setting from UP/DOWN key of digital operator.	volume setting value
F02	Acceleration time1 setting	0	0.1 ~ 3000sec  Minimum	30.0sec
F03	Deceleration time 1 setting	0	0.1~3000sec  Minimum	30.0sec
F04	Rotation direction setting	х	Two options: select codes: 0 Forward run 1 Reverse run	0
A	Extended function of A group setting	-	Basic setting functions setting range : A01~A65.	-
b	Extended function of b group setting	-	Fine tuning functions Setting range :b01~b27.	-
C	Extended function of C group setting		Terminal setting functions Setting range :C01~C21.	-
H	Extended function of H group setting	-	Sensorless vector setting functions Setting range :H01~H11.	-

Note) If you set the carrier frequency less than 2kHz, acceleration / deceleration time delays approximately 500msec.

# 2.6.4 Expanded Function Mode of A Group

Func- code	Name	Run- time Edit	Description	Defaults
Ba	sic parameter setting			
A01	Frequency command (Multi-speed command method)	Х	Four options: select codes:  0 Keypad potentiometer  1 Control terminal input  2 Standard operator  3 Remote operator(communication)	1
A02	Run command	Х	Set the method of run commanding:  0 Standard operator  1 Control terminal input  2 Remote operator(communication)	1
A03	Base frequency setting	х	Settable from 0 to maximum frequency in units of 0.01Hz  V 100%  (A04)  Base Maximum frequency (A03)	60.00Hz
A04	Maximum frequency setting	Х	Settable from the base frequency [A03] up to 400Hz in units of 0.01 Hz.	60.00Hz
An	alog Input Settings			
A05	External frequency setting start (O, OI)	х	Start frequency provided when analog input is 0V (4mA) can be set in units of 0.01Hz setting range is 0 to 400 Hz  Frquency  (A06)  (A05)  (A07)  (A08)  (A08)  10V  4mA  Analog input  20mA	0.00Hz
A06	External frequency setting end (O, OI)	Х	End frequency provided when analog input is 10V (20mA) can be set in units of 0.01Hz. Setting range is 0 to 400Hz	0.00Hz
A07	External frequency start rate setting (O, OI)	х	The starting point(offset) for the active analog input range(0~10V, 4mA~20mA) setting range is 0 to 100% in units of 0.1%	0.0%

	External frequency end rate setting (O, OI)	×	The ending point(offset) for the active analog input range(0~10V, 4mA~20mA) setting range is 0 to 100% in units of 0.1%	100.0%
Func- code	Name	Run- time Edit	Description	
A09	External frequency start pattern setting	x	Two options: select codes:  Frquency  (A06)  (A09=0)  (A09=1)  (A08) $4V$ $4W$ $4W$ $4W$ Analog input  0 start at start frequency  1 start at 0Hz	0
A10	External frequency sampling setting	Х	Range n = 1 to 8, where n = number of samples for average	4
Mul	ti-speed Frequency	Settir		
A11 ~ A25	Multi-speed frequency setting	0	Defines the first speed of a multi-speed profile, range is 0 to 400Hz in units of 0.01Hz. Setting range is 1-speed(A11) to 15-speed(A25). Speed0 : volume setting value	speed1:5Hz speed2:10Hz speed3:15Hz speed4:20Hz speed5:30Hz speed6:40Hz speed7:50Hz speed8:60Hz etc. 0Hz
A26	Jogging frequency setting	0	Defines limited speed for jog, range is 0.5 to 10.00Hz in units of 0.01Hz.  The jogging frequency is provided safety during manual operation.	0.50Hz
	Jogging stop operation selection	Х	Define how end of jog stops the motor: three options: 0 Free-run stop 1 Deceleration stop(depending on deceleration time) 2 DC braking stop(necessary to set DC braking)	0
V/F	Characteristics			
A28	Torque boost mode selection	Х	Two options: 0 Manual torque boost 1 Automatic torque boost	0

A29	Manual torque boost setting	0	Can boost starting torque between 0 and100% above normal V/F curve, from 0 to 1/2 base frequency Be aware that excessive torque boost can cause motor damage and inverter trip.  Maximum output voltage  (A29)  (A30)  (Base frequency in [%]	2.5%
Func- code	Name	Run- time Edit	Description	Defaults
A30	Manual torque boost frequency setting	0	Sets the frequency of the V/F breakpoint A in graph for torque boost.	100.0%
A31	V/F characteristic curve selection	x	Two available V/F curves: three select codes:  0 Constant torque  1 Reduced torque(reduction of the 1.7th power)  2 Sensorless vector control  100.0%  Constant torque  Output Frequency 100.0%	0
A32	V/F gain setting	0	Sets output voltage gain of the inverter from 20 to 110%  It is proper to set the voltage gain above 100% in case the rated output voltage is lower than the rated input voltage  100.0%  Output  Output  Output  Frequency	100.0%
DC	Braking Settings			1
A33	DC braking function selection	Х	Sets two options for DC braking  0 Disable  1 Enable	0
A34	DC braking frequency setting	Х	The frequency at which DC braking occurs, range is 0.0 to 10.0 Hz in units of 0.01Hz	0.50Hz
A35	DC braking output delay time setting	Х	The delay from the end of Run command to start of DC braking (motor free runs until DC braking begins).	0.0sec

		1.						
		5	Setting range is 0.0 to 5.0sec in units of 0.1set.					
			Free run (A35)  Current  Current  Time					
A36	DC braking force setting	ΧI	Applied level of DC braking force settable from ) to 100% in units o 0.1%	50.0%				
A37	DC braking time setting	ΧI	Sets the duration for DC braking, range is 0.0 to 10.0 seconds in units of 0.1sec.	0.0sec				
Func- code	Name	Run- time Edit	Description	Defaults				
Fre	equency-related Fund	ctions		•				
			Sets a limit on output frequency less than the maximum frequency(A04). Range is 0.00 to 400.0Hz in units of 0.01Hz.  Output limit (A38)					
A38	Frequency upper limit setting	X	Adjustable range  Lower limit (A39)  Frequency command	0.00Hz				
A39	Frequency lower limit setting	Х	Sets a limit on output frequency greater than zero. Range is 0.00 to 400.0Hz in units of 0.01Hz	0.00Hz				
A40 A42 A44	Jump(center) frequency setting	х	Up to 3 output frequencies can be defined for the output to jump past to avoid motor resonances (center frequency) range is 0.00 to 400.0Hz in units of 0.01Hz	0.00Hz				
A41 A43 A45	Jump(hysteresis) frequency width setting	х	Defines the distance from the center frequency at which the jump around occurs.  Range is 0.00 to 10.00Hz in units of 0.01Hz  Output frequency  (A40)  Setting frequency	0.00Hz				
PIE	Control(Note1 : p 4-1	13)		<u> </u>				
A46	PID Function selection	х	Enables PID function, two option codes:  0 PID control disable  1 PID control enable	0				

## N700E INSTRUCTION MANUAL

A47	PID P(proportional) gain setting	0	Proportional gain has a range of 0.1 to 100 in the units of 0.1	10.0%
A48	PID I (integral) gain setting	0	Integral time constant has a range of 0.0 to 100.0 seconds in units of 0.1	10.0sec
A49	PID D(derivative) gain setting	0	Derivative gain has a range of 0.0 to 100 .0 seconds in units of 0.1	0.0sec
A50	PID scale factor setting	Х	PID scale factor (multiplier), range of 0.1 to 1000 in units of 0.1.	100.0
A51	Feed-back method setting	Х	Selects source of PID, option codes:  0 "OI" terminal(current in put)  1 "O" terminal(voltage in put)	0

Func- code	Name	Run- time Edit	Description	Defaults
Aut	omatic Voltage Regula		VR) Function	
A52	AVR function selection	x	Automatic (output) voltage regulation, selects from three type of AVR functions three option codes: 0 Constant ON 1 Constant OFF 2 OFF during deceleration	2
A53	Motor input voltage setting	Х	200V class inverter settings: 200/220/230/240 400V class inverter settings: 380/400/415/440/460/480 The AVR feature keeps the inverter output waveform at a relatively constant amplitude during power input fluctuations	220V/ 380V
Sec	ond Acceleration and	Decele		
A54	Second acceleration time setting	0	Duration of 2nd segment of acceleration, range is 0.1 to 3000 sec.  Second acceleration can be set by the [2CH] terminal input or frequeny transition setting	30.0sec
A55	Second deceleration time setting	0	Duration of 2nd segment of deceleration, motor range is 0.1 to 3000 sec.  Second acceleration can be set by the [2CH] terminal input or frequency transition setting	30.0sec
A56	Two stage acce1/dece1 switching method selection	Х	Two options for switching from 1st to 2nd accel/decel:  0 2CH input from terminal  1 transition frequency  ACC2  ACC1  ACC1  2CH  Time	0
A57	Acc1 to Acc2 frequency transition point	Х	Output frequency at which Accel 1 switches to Accel 2, range is 0.00 to 400.0Hz in units of 0.01Hz.	0.00Hz
A58	Decel to Dec2 frequency transition point	Х	Output frequency at which Decel 1 switches to Decel 2, range is 0.00 to 400.0Hz in units of 0.01Hz.	0.00Hz

Func-	Name	Run- time Edit	Description	Defaults
A59	Acceleration curve selection	X	Set the characteristic curve of Acc1 and Acc2, two options:.  0 Linear  1 S-curve (max. acceleration time : 39.0sec)  2 U-curve (max. acceleration time : 29.0sec)  Output Frequency  Output Frequency  Target	0
A60	Deceleration curve setting	х	Set the characteristic curve of dec1 and dec2, two options:.  0 Linear  1 S-curve  (max. deceleration time : 39.0sec)  2 U-curve  (max. deceleration time : 29.0sec)	0
A61	Input voltage offset setting	0	Set the voltage offset for external analog signal input signal adjustment	0.0
A62	Input voltage Gain setting	0	Set the voltage gain for external analog signal input signal adjustment	100.0
A63	Input current offset setting	0	Set the current offset for external analog signal input signal adjustment	0.0
A64	Input current Gain setting	0	Set the current gain for external analog signal input signal adjustment	100.0

## N700E INSTRUCTION MANUAL

A65	FAN operation mode	Х	Se the FAN operation mode 0 : always ON 1 : ON in the run time	0
-----	--------------------	---	--	---

## Note 1) PID feedback control

The PID(Proportional, Integral, Differential) control functions can apply to controlling of fan, the air (water) amount of pump, etc., as well as controlling of pressure within a fixed value.

[Input method of target value signal and feedback signal]

Set the reference signal according to the frequency setting method or the internal level.

Set the feedback signal according to the analog voltage input (0 to 10V) or analog current input (4 to 20mA). If both input signal (target value and feedback value) set the same terminal,

PID control is not available.


To use analog current [OI-L] for the target value, set the [AT] terminal to ON.

#### [PID gain adjustment]

If the response is not stabilized in a PID control operation, adjust the gains as follows according to the symptom of the inverter.

- The change of controlled variable is slow even when the target value is changed.
  - → Increase P gain [A47]
- The change of controlled variable is fast, but not stable.
  - → Decrease P gain[A47]
- It is difficult to make the target value match with the controlled variable.
  - → Decrease I gain [A48]
- Both the target value and the controlled variable are not stable.
  - → Increase I gain [A48]
- The response is slow even when the P gain is increased.
  - → Increase D gain [A49]
- The response is not stabilized due to oscillation even when the P gain is increased.
  - → Decrease D gain [A49]

The figure below is a more detailed diagram of the PID control.

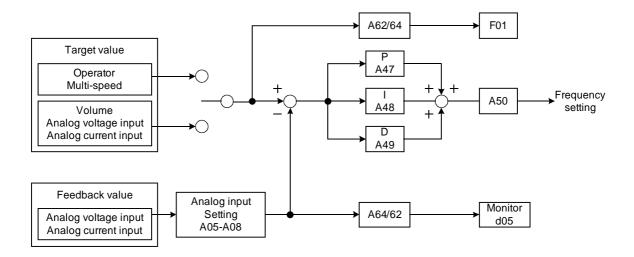

# 2.6.5 Expanded function mode of b group

Func- code	Name	Run- time Edit	Description	Defaults
Re	start Mode	Edit		
b01	Selection of restart mode	Х	Select inverter restart method, four option codes:  0 Alarm output after trip, no automatic restart  1 Restart at 0Hz  2 Resume operation after frequency matching  3 Resume previous freq. after freq. matching, then decelerate to stop and display trip info.  • Restart trip is over current, overvoltage and under voltage.  • Over current and over voltage trip restart up to 3 times, under voltage trip restart up to 10time.	0
b02	Allowable instantaneous power failure time setting	х	The amount of time a power input under voltage can occur without tripping the power failure alarm. Range is 0.3 to 1.0sec. If under-voltage exists longer than this time, the inverter trips, even if the restart mode is selected.	1.0sec
b03	Reclosing stand by after Instantaneous power failure recovered ectronic Thermal Overloa	X	Time delay after under-voltage condition goes away, before the inverter runs motor again.  Range is 0.3 to 10.0 seconds.  Input Failure  Motor speed	1.0sec
b04	Electronic thermal level setting	X	Set a level between 20% and 120% for the rated inverter current. setting range- 0.2 × (inverter rated current)~ 1.2 × (inverter rated current).	100.0%
b05	Electronic thermal characteristic, selection	X	Select from two curves, option codes:  0(SUB) reduced torque characteristic  1(CRT) constant torque (CRT)  Constant torque(CRT)  Reduced torque(SUB)  Reduced torque(SUB)  Output frequency (Hz)	1

Func- code	Name	Run- time Edit	Description	Defaults
Ov	erload Restriction			
b06	Overload overvoltage Restriction mode selection	х	Select overload or overvoltage restriction modes  0 Overload, overvoltage restriction mode OFF  1 Only overload restriction mode ON  2 Only overvoltage restriction mode ON  3 Overload overvoltage restriction mode ON	3
b07	Overload restriction level setting	X	Sets the level for overload restriction, between 20% and 200% of the rated current of the inverter, setting range 0.2x(inverter rated current) ~ 2.0x(inverter rated current)	180%
b08	Overload restriction constant setting	x	Set the deceleration rate when inverter detects overload, range is 0.1 to 10.0 and resolution is 0.1  Motor	1.0sec
Sof	tware Lock Mode	•		,
b09	b09 Software lock mode selection X		Prevents parameter changes, in four options, option codes:  0 All parameters except b09 are locked when SFT from terminal is on  1 All parameters except b09 and output frequency F01 are locked when SFT from terminal is ON  2 All parameters except b09 are locked  3 All parameters except b09 and output frequency F01 setting are locked	0

Func- code	Name	Run- time Edit	Description	Defaults
Oth	ner Function			
b10	Start frequency Adjustment	Х	Sets the starting frequency for the inverter output, range is 0.50 to 10.00Hz in units of 0.01Hz	0.50Hz
b11	Carrier frequency setting	0	Sets the PWM carrier frequency, range is 3kHz to 16.0kHz in units of 0.1kHz.	5.0kHz
b12	Initialization mode (parameters or trip history)	х	Select the type of initialization to occur, two option codes:  0 Trip history clear  1 Parameter initialization (exceptional data)  b13 : Country code  A53 : Rated Motor Voltage	0
b13	Country code for initialization	х	Select default parameter values for country on initialization, three options, option codes:  0 Korean version  1 European version  2 US version	0
b14	RPM conversion facto	0	Specify a constant to scale the displayed RPM for [d08] monitor, range is 0.01 to 99.99 in units of 0.01	1.00
b15	STOP key validity during terminal operation	Х	Select whether the STOP key on the keypad is enabled, two option codes:  0 stop enabled  1 stop disabled	0
b16	Resume on FRS cancellation mode	Х	Select how the inverter resumes operation when the free- run stop (FRS) is cancelled, two options: 0 Restart from 0Hz 1Restart from frequency detected from real speed of motor	0
b17	Communication number	X	Sets the communication number for communication, range is 1 to 32.	1
b18	Ground fault setting	Х	Select the function and level of ground fault  0: Do not detect ground fault.  0.1~100.0%: Detect ground fault as the % level of rated current.	0.0

				Controls the starting current level during speed search	
١,	o19	Speed Search Current	0	motion on the basis of the motor rated current.	1000/
'	פוכ	Suppression Level	O	The Current Suppression Level of the controller is set	100%
				from 90 % to 180%	

Func- code	Name	Run- time Edit	Description	Defaults
Oth	ner Function			
b20	Voltage increase Level during Speed Search	0	In case of the lower starting current level during speed search motion on the basis of the motor rated current, the increase level of the output voltage is set from 10 % to 300%	100%
b21	Voltage decrease Level during Speed Search	0	In case of the higher starting current level during speed search motion on the basis of the motor rated current, the decrease level of the output voltage is set from 10 % to 300%	100%
b22	Speed decrease Level during Speed Search	0	Controls the speed decrease level during speed search motion.  The speed decrease level of the controller is set from 1.0 to 200.0%  (Operator display: 10 ~ 2000)	100.0% (1000)
b23	523 Frequency match operation selection		In case of inverter starting operation, the start frequency of the inverter can be selected as follows  0: 0Hz Starting operation  1: Frequency matching & start operation	0
b24	Failure status output selection by relay in case of LV failure	0	In case of low voltage failure, the alarm relay operation can be selected as follows  0 : Inactive incase of low voltage failure  1 : Active incase of low voltage failure	0
b25	Stop method selection	0	You can choose the method of stopping the motor when the inverter is given a stop command during operation.  0: a normal decelerating stop  1: free-run stop	0
b27	Input phase loss	Х	A function that detects phase loss in the input AC source. Detection is performed using the fluctuation in the main circuit's DC voltage. Also, in the case of degradation in the main capacitor it could be occurred where maintenance replacement is required.  To set the detection time of input phase loss, "code b27" is used. $(0 \sim 100 \text{ in sec})$ When b27 equals "0", input phase loss function is disabled.	10

# 2.6.6 Expanded Function Mode of C Group

Func- code	Name	Run- time Edit	Description	Defaults
Inp	ut Terminal Function			
C01	Intelligent Input terminal 1 setting	X	Select function for terminal 1 <code> 0: Forward run command(FW)  1: Reverse run command(RV)  2: 1st multi-speed command(CF1)  3: 2nd multi-speed command(CF2)  4: 3rd multi-speed command(CF3)  5: 4th multi-speed command(CF4)  6: Jogging operation command(JG)  8: 2-stage acceleration/deceleration command(2CH)  9: Free-run stop command(FRS)  10: External trip(EXT)  11: Unattended start protection(USP)  12: Software lock function(SFT)  13: Analog input current/voltage selection signal(AT)  14: Reset(RS)  15: Start(STA)  16: Stop(STP)  17: Forward/reverse(F/R)  18: Remote control UP(UP)  19: Remote control DOWN(DOWN)</code>	0
C02	Intelligent Input terminal 2 setting	Х	Select function for terminal 2 <a href="code">code</a> -see C01 parameter	1
C03	Intelligent Input terminal 3 setting	Х	Select function for terminal 3 < code>-see C01 parameter	2
C04	Intelligent Input terminal 4 setting	Х	Select function for terminal 4 <pre><code>-see C01 parameter</code></pre>	3
C05	Intelligent Input terminal 5 setting	Х	Select function for terminal 5 <a href="code">code</a> -see C01 parameter	13

Func-	Name	Run- time Edit	Description	Defaults
Inp	ut Terminal Status			
C07	Input Terminal 1 a/b contact setting (NO/NC)	х	Select logic convention, two option codes:  0 normally open [NO]  1 normally closed [NC]	0
C08	Input Terminal 2 a/b contact setting (NO/NC)	Х	Select logic convention, two option codes: 0 normally open [NO] 1 normally closed [NC].	0
C09	Input Terminal 3 a/b contact setting (NO/NC)	Х	Select logic convention, two option codes:  0 normally open [NO]  1 normally closed [NC]	0
C10	Input Terminal 4 a/b contact setting (NO/NC)	Х	Select logic convention, two option codes:  0 normally open [NO]  1 Normally closed [NC].	0
C11	Input Terminal 5 a/b contact setting (NO/NC)		Select logic convention, two option codes:  0 normally open [NO]  1 Normally closed [NC].	0
Ou	tput Terminal Function			
C13	Intelligent output terminal RN setting	х	Select function for terminal RN <code> 0 RUN(Run signal) 1 FA1(Frequency arrival signal: command arrival) 2 FA2(Frequency arrival signal: setting frequency or more) 3 OL(Overload advance notice signal) 4 OD(Output deviation for PID control) 5 AL(Alarm signal)</code>	0
C14	Intelligent relay output terminal AL a/b contact setting	Х	Select function for terminal AL contact 0 a contact (normally open) [NO] 0 b contact (normally close) [NC]	0
C15	Monitor signal selection	Х	Select function for terminal FM, 3 options  0 output frequency monitor  1 output current monitor  2 output voltage monitor	0

Func- code	Name	Run- time Edit	Description	Defaults
Out	put Terminal state set			
C16	Analog meter gain adjustment	0	Range is 0 to 250, resolution is 1	100.0%
C17	Analog meter offset adjustment	0	Range is -3.0 to 10.0% resolution is 0.1	0.0%
Out	put Terminal related f	unctio	n	
C18	Overload advance notice signal level setting	X	Sets the overload signal level between 50% and 200% resolution is 0.1%.0.5x(Inverter rated current)  ~2.0x (Inverter rated current)  Motor current  Over load signal output	100.0%
C19	Acceleration arrival signal frequency setting	X	Sets the frequency arrival setting thres-hold for the output frequency during acceleration. Setting range is 0.0 to A04, resolution is 0.01Hz  Output frequency  Frequency arrival signal	0.00Hz
C20	Deceleration arrival signal frequency setting	Х	Sets the frequency arrival setting threshold for the output frequency during deceleration, setting range is 0.00 to 400.0Hz resolution is 0.01Hz	0.00Hz
C21	PID deviation level setting	X	Sets the allowable PID loop error magnitude. Setting range is 0.0 to 100%, resolution is 0.01%  Target value  PID control  Deviation signal	10.0%

# 2.6.7 Expanded Function mode of H Group

Func- code	Name	Run- time Edit	Description	Defaults
H01	Auto-tuning mode selection	Х	Two States for auto-tuning function, option codes:  0 Auto-tuning OFF  1 Auto-tuning ON	0
H02	Motor data selection	X	Two selections, option codes:  0Use standard motor data  1Use auto-tuning data	0
H03	03 Motor capacity		00.4L: 220V / 0.4kW 00.7L: 220V / 0.75kW 01.5L: 220V / 1.5kW 02.2L: 220V / 2.2kW 03.7L: 220V / 3.7kW 05.5L: 220V / 5.5kW 00.4H: 380V / 0.4kW 00.7H: 380V / 0.75kW 01.5H: 380V / 1.5kW 02.2H: 380V / 2.2kW 03.7H: 380V / 3.7kW 05.5H: 380V / 5.5kW	-
H04	Motor poles setting	X	2/4/6/8 poles	4
H05	Motor rated current	Х	Range is 0.1 – 50.0A	-
H06	Motor no-load current 10	Х	Range is 0.1 – 50.0A	-
H07	Motor rated slip X		Range is 0.01 – 10.0%	-
H08	Motor Resistance R1	Х	Range is 0.001 - 30.00Ω	-
H09	Transient Inductance X		Range is 0.01 – 100.0mH	-
H10	Motor Resistance R1	Х	Range is 0.001 - 30.00Ω	-
H11	Transient Inductance	Х	Range is 0.01 – 100.0mH	-

# 3. Using intelligent terminals

# 3.1 Intelligent terminal lists

	minal mbol	Terminal name	Description
Intelligent Input Terminal (1~5)	FW (0)	Forward RUN/STOP terminal	SWF switch ON(closed) :Forward run OFF(open) : stop
ent Input T	RV (1)	Reverse RUN/STOP terminal	SWR switch ON(closed) :Reverse run OFF(open) :stop    CM1
Intellige	CF1 (2)		3-speed
	CF2 (3)	Multi-speed frequency	CM1 5 4 3 2 1 L
	CF3 (4)	commanding terminal	Switch  CF1 ON ON ON Default terminal setting  CF2 ON ON Terminal 2: RV
	CF4 (5)	2	FW ON Terminal 3 : CF1
	JG (6)	Jogging	Jogging operation
	2CH (8)	2-stage acceleration /deceleration	The acceleration or deceleration time is possible to change considering the system.
	FRS (9)	Free-run stop	The inverter stops the output and the motor enters the free- run state. (coasting)
	EXT (10)	External trip	It is possible to enter the external trip state
	USP (11)	Unattended start prevention	Restart prevention when the power is turned on in the RUN state.
	SFT (12)	Terminal soft- ware lock	The data of all the parameters and functions except the output frequency is locked.
	AT (13)	Current input selection	The [AT] terminal selects the inverter uses the voltage [O] or current [OI] input terminals for external frequency control.
	RS (14)	Reset	If the inverter is in Trip Mode, the reset cancels the Trip Mode.
	STA (15)	Start	3-Wire input Start.
	STP (16)	Stop	3-Wire input Stop.
	F/R (17)	Forward/Reverse	·
	UP (18)	Remote control UP	Remote control UP

## N700E INSTRUCTION MANUAL

DOWN Remote control (19) DOWN		Remote control DOWN
CM1	Signal source for input	Common terminal for intelligent input terminals.
P24	External power supply terminal for input	External power connection terminal for intelligent input terminals.

	minal nbol	Terminal name	Description			
	Н	Frequency command power terminal				
cy commanding	0/01	Frequency commanding terminal(voltag e commanding) Frequency	When assign 13[AT signal] to code C01~C05  • AT signal ON:  It is possible to command frequency using voltage signal terminal O-L(0~10V)  • AT signal OFF:  It is possible to command frequency using current signal terminal OI-L(4~20mA)			
Frequency		commanding terminal(current command)	When nog assign 13[AT signal] to code C01~C05 It is possible to commend frequency use the algebraic sum of both the voltage and current input			
	L command common terminal					
terMinimialor	FM	Frequency monitor	Analog output frequency monitor/ analog output current monitor/ analog output voltage monitor			
Α	LO		At normal status, power off(initial setting value) : Al0 - AL1(closed)  At abnormal status : AL0 - AL2(closed)			
A	L1	Intelligent Output	Contact rating : 250V AC 2.0A(resistor 1oad) 0.2A(inductor load)			
Α	L2	terminals	30V DC 3.0A(resistor 1oad) 0.7A(inductor load) (minimum 100V AC 10mA, 5V DC 100mA)			

## **Monitor terminal function**

## Monitor terminal function [FM] (analog)

- The inverter provides an analog output terminal primary for frequency monitoring on terminal [FW] (output frequency, Output current, and output voltage monitor signal).
- Parameter C17 selects the output signal data.

When using the analog motor for monitoring, use scale reactor C18 and C19 to adjust the [FM] output so that the maximum frequency in the inverter corresponds to full-scale reading on the motor.

## (1) output frequency monitor signal

The [FM] output duty cycle varies with the inverter output frequency.

The signal on [FM] reaches full scale when the inverter outputs the maximum frequency.

Note) This is dedicated indicator, so that it cannot be used as a line speed signal.

The indicator accuracy after adjustment is about ±5%

(Depending on the meter, the accuracy may exceed this value)

## (2) output current monitor signal

The [FM] output duty cycle waries with the inverter output current to the motor.

The signal on [FM] reaches full scale when the inverter output current reaches 200% of the rated inverter current.

The accuracy of the current reaches approximately ±10%

inverter output current (measured) : Im monitor display current : Im' inverter rated current : Ir

$$\frac{\text{Im'-Im}}{\text{Ir}} \times 100 \le \pm 10\%$$

## (3) output voltage monitor signal

The [FM] output duty cycle varies with inverter output voltage.

The signal on [FM] reaches full scale when the inverter output voltage reaches 100% of the rated inverter voltage.

## 3.2 Intelligent Input Terminal Function

## Forward Run/Stop [FW] and Reverse Run/Stop Command [RV]

- When you input the Run command via the terminal [FW], the inverter executes the Forward Run command (high) or Stop command(low)
- When you input the Run command via the terminal [RV], the inverter executes the Reverse Run command (high) or Stop command(low).

Option Code	T FUNCTION NAME TO		State	Description
0	FW	Forward Run/Stop	ON	Inverter is in Run Mode, motor runs forward
	FVV	Forward Kuri/Stop	OFF	Inverter is in Run Mode, motor stop
4	D\/	Deverse Bun/Sten	ON	Inverter is in Run Mode, motor runs reverse
'	RV	Reverse Run/Stop	OFF	Inverter is in Run Mode, motor runs stop
Valid for	C01,C02,C03,C04, Valid for inputs: C05			Example:
Require	d setting	A02=01		
comma inverte  • When [RV] futhe mo	ands are ac r enters the a terminal a nction is co tor starts ro	d Run and Reverse Run tive at the same time, th Stop Mode.  associated with either [For a special property of the content of t	RV FW  CM1 6 5 4 3 2 1 P24  SWR SWF	



Set the parameter A02 to 1

DANGER: If the power is turned on and the Run command is already active, the motor starts rotation and is dangerous! Before turning power on, confirm that Run command is not active.

## Multi-Speed Select [CF1][CF2][CF3][CF4]

• The inverter provides storage parameters for up to 16 different target frequencies (speeds) that the motor output uses for steady-state run condition.

These speeds are accessible through programming four of the intelligent terminals as binary-encoded inputs CF1 to CF4 per the table .


These can be any of the six inputs, and in any order.

You can use fewer inputs if you need eight or less speeds.

Note: When choosing a subset of speeds to use, always start at the top of the table, and with the least-significant bit: CF1, CF2, etc.

Multi apped	Control circuit terminal								
Multi-speed	SW5	SW4	SW3	SW2					
Speed 0	OFF	OFF	OFF	OFF					
Speed 1	OFF	OFF	OFF	ON					
Speed 2	OFF	OFF	ON	OFF					
Speed 3	OFF	OFF	ON	ON					
Speed 4	OFF	ON	OFF	OFF					
Speed 5	OFF	ON	OFF	ON					
Speed 6	OFF	ON	ON	OFF					
Speed 7	OFF	ON	ON	ON					
Speed 8	ON	OFF	OFF	OFF					
Speed 9	ON	OFF	OFF	ON					
Speed 10	ON	OFF	ON	OFF					
Speed 11	ON	OFF	ON	ON					
Speed 12	ON	ON	OFF	OFF					
Speed 13	ON	ON	OFF	ON					
Speed 14	ON	ON	ON	OFF					
Speed 15	ON	ON	ON	ON					

NOTE: Speed 0 is set by the F01 parameter value.

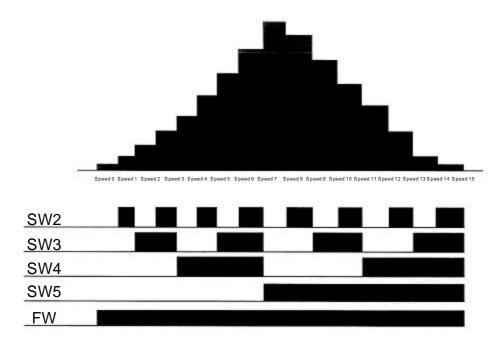

		Control circuit terminal								
Multi-speed	Set code	SW5	SW4	SW3	SW2	SW1				
		CF4	CF3	CF2	CF1	FW				
Speed 0	F01	OFF	OFF	OFF	OFF	ON				
Speed 1	A11	OFF	OFF	OFF	ON	ON				
Speed 2	A12	OFF	OFF	ON	OFF	ON				
Speed 3	A13	OFF	OFF	ON	ON	ON				
Speed 4	A14	OFF	ON	OFF	OFF	ON				
Speed 5	A15	OFF	ON	OFF	ON	ON				
Speed 6	A16	OFF	ON	ON	OFF	ON				
Speed 7	A17	OFF	ON	ON	ON	ON				
Speed 8	A18	ON	OFF	OFF	OFF	ON				
Speed 9	A19	ON	OFF	OFF	ON	ON				
Speed 10	A20	ON	OFF	ON	OFF	ON				
Speed 11	A21	ON	OFF	ON	ON	ON				
Speed 12	A22	ON	ON	OFF	OFF	ON				
Speed 13	A23	ON	ON	OFF	ON	ON				
Speed 14	A24	ON	ON	ON	OFF	ON				
Speed 15	A25	ON	ON	ON	ON	ON				

Standard operator option code

Set the parameter [  $C01 \sim C05$  ] to [  $A11 \sim A25$  ], F01

Option Code	Terminal Symbol	Function Name	State	Description					
Valid for	Valid for inputs: C01,C02,C03,C04,C05		4,C05	Example:					
Require	d setting	F01, A11 to A25							
setting time an Note the no data  • When than to pro	sure to pres d then set the nat when the will be set. a multi-spee 50Hz(60Hz) gram the m	ng the multi-speed as the Store key ead he next multi-speed e key is not pressed ed setting more is to be set, it is ne aximum frequency to allow that speed	d setting. d, cessary	CF4 CF3 CF2 CF1 FW  CM1 5 4 3 2 1 P24  SW5/SW4/SW3/SW2/SW1/					

• While using the multi-speed capability, you can monitor the current frequency with monitor function F01 during each segment of a multispeed operation. There are two ways to program the speeds into the registers A20 to A25

Programming using the CF switches, Set the speed by following these steps

- (1) Turn the Run command off(Stop Mode).
- (2) Turn each switch on and set it to Multi-speed n. Display the data section of F01.
- (3) Set an optional output frequency by pressing the






- (4) Press the (STR) key once to store the set frequency. When this occurs, F01 indicates the output frequency of Multi-speed n.
- (5) Press the (FUNC) key once to confirm that the indication is the same as the set frequency.
- (6) When you repeat operations in (1) to (4), the frequency of Multi-speed can be set.

It can be set also be parameters A11 to A25

## **Jogging Command [JG]**

- When the terminal [JG] is turned on and the Run command is issued, the inverter outputs the programmed jog frequency to the motor. Use a switch between terminals [CM1] and [P24] to activate the JG frequency.
- The frequency for the jogging operation is set by parameter A26.
- •Set the value 1(terminal mode) in A02(Run command)
- Since jogging does not use an acceleration ramp, we recommend setting the jogging frequency in A26 to 5Hz or less to prevent tripping.

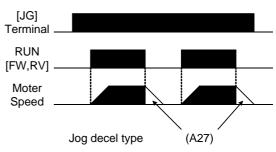

0:Free-run stop

1:Deceleration stop 2:DC braking stop

The type of deceleration used to end a motor jog is selectable by programming function A27 The options are:

- 0: Free-run stop (coasting)
- 1 : Deceleration (normal level) and stop
- 2: DC braking and stop

Option Code	Terminal Symbol	Function Name	Input State	Description									
6	JG			Inverter is in Run Mode, output to motor runs at jog parameter frequency.									
			OFF	Inverte	Inverter is in Stop Mode.								
Valid for i	nputs:	s: C01,C02,C03,C04,C05			Example:								
Required	setting	A02, A26, A27	JG FW										
Notes:								1		"		1	
• No ioggi	ing operatio	un is performed whe	an.		CM1	5	4	3	2	1	P24		
No jogging operation is performed when the set value of jogging frequency A26 is smaller than the start frequency B10 or the value is 0Hz.						S	SW3 /	5	SW1/				
Be sure to stop the motor when switching the function [JG] on or off.													

## **Two-stage Acceleration and Deceleration [2CH]**

- When terminal [2CH] is turned on, the inverter changes the rate of acceleration and deceleration from the initial settings F02 (acceleration time1) and F03(deceleration time1) to use the second set of acceleration / deceleration values.
- [PW,RV]
- When the terminal is turned off, the equipment is turned off, the equipment is returned to the original acceleration and deceleration time (F02 acceleration time1 and F03 deceleration time1).
   Use A54 (acceleration time2) and A55 (deceleration time2) to set the second stage acceleration and deceleration time.
- In the graph shown above, the [2CH] becomes active during the initial acceleration. This causes the inverter to switch form using acceleration 1 (F02) to acceleration 2 (A54)

Option Code	Terminal Symbol	Function Name	Input State	Description						
8	2CH	Two-stage		Frequency output uses 2nd-stage acceleration and deceleration values						
	10	and Deceleration	OFF	Frequency output uses the initial acceleration 1 and deceleration 1 values						
Valid for	inputs:	nputs: C01,C02,C03,C04,C05		Example:						
Require	d setting	A54, A55, A56		2CH FW						
Notes:  • Function A56 selects the method for second stage acceleration.  It must be 00 to select the input terminal method in order for the 2CH terminal assignment to operate.		al method	CM1 5 4 3 2 1 P24  SW5 SW1							

## Free-run stop [FRS]

• When the terminal [FRS] is turned on, the inverter stops the output and the motor enters the free-run state (coasting).

If terminal [FRS] is turned off, the output resumes sending power to the motor if the Run command is still active.


The free-run stop feature works with other parameters to provide flexibility in stopping and starting motor rotation.

• In the figure below, parameter B16 selects whether the inverter resumes operation form 0Hz (left graph) or the current motor rotation speed (right graph) when the [FRS] terminal turns off.

The application determines which is the best setting.

Parameter B03 specifies a delay time before resuming operation from a free-run stop.

To disable this feature, use a zero delay time.

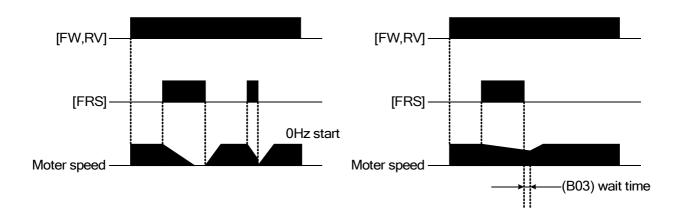

Option Code	Terminal Symbol	Function Name	Input State	Description								
9	FRS	From run Ston	ON	Causes output to turn off, allowing motor to free run (coast) to stop								
9	FKS	Free-run Stop	OFF	Output operates normally, so controlled deceleration stops motor								
Valid for	for inputs: C01,C02,C03,C04,C05			Example:								
Require	ed setting B03, b16, C07 to C12				•			FRS		FW		
Notes:					CM1	5	4	3	2	1	P24	
active change corresp	<ul> <li>When you want the [FRS] terminal to be active low(normally closed logic), change the setting (C07 to C12) which corresponds to the input (C01 to C06) that is assigned the [FRS] function</li> </ul>						S	sw3/	5	SW1/		


## **External Trip [EXT]**

• When the terminal [EXT] is turned on, the inverter enters the trip state, indicates error code, E12 and stop the output.

This is a general purpose interrupt type feature, and the meaning of the error depends on what you connect to the [EXT] terminal. When the switch between the set terminals [EXT] and [CM1] is turned on, the equipment enters the trip state.

Even when the switch to [EXT] is turned off, the inverter remains in the trip state.

You must reset the inverter or cycle power to clear the error, returning the inverter to the Stop Mode.

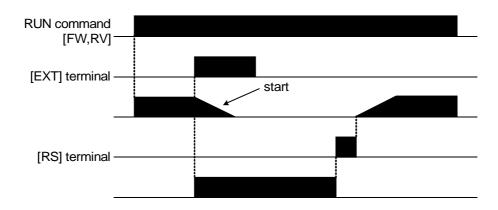

Option Code	Terminal Symbol	Function Name	Input State	Description								
10			ON		When assigned input transitions Off to On, inverter latches trip event and displays E12							
10	EXT	External Trip	OFF	No trip event for On to Off, any recorded trip events remain in history until Reset.								ents
Valid for inputs: C01,C02,C03,C04,C05		Example:										
Required setting (none)							EXT		FW			
Notes:	Notes:			CM1	5	4	3	2	1	P24		
If the USP (Unattended Start Protection) feature is in use, the inverter will not automatically restart after cancelling the EXT trip event. In that case, it must receive enter Run command (off-to-on transition)					S	SW3/	(	SW1/				

## **Unattended Start Protection [USP]**

• If the Run command is already set when power is turned on, the inverter starts running immediately after power up.

The Unattended Start Protection (USP) function prevents that automatic start up, so that the inverter will not run with-out outside intervention.


To reset an alarm and restart running, turn the Run commend off or perform a reset operation by the terminal[RS] input or the keypad Stop/reset key.

 In the figure below, the [UPS] feature is enabled. When the inverter power turns on, the motor does not start, even though the Run command is already active.

Instead, it enters the USP trip state, and displays E13 error code.

This forces outside intervention to reset the alarm by turning off the Run command.

Then the Run command can turn on again and start the inverter output.

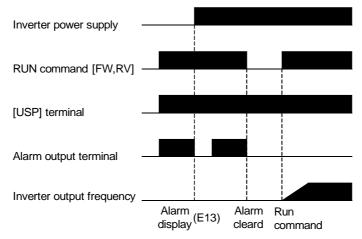

Option Code	Terminal Symbol	Function Name	Input State	Description						
44	HCD	Unattended		On power up, the inverter will not resume a Run command (mostly used in the Us)						
11	USP	start Protection	OFF	On power up, the inverter will not resume a Run command that was active before power loss						
Valid for	alid for inputs: C01,C02,C03,C04,C05		4,C05	Example:						
Require	d setting	(none)								
Notes:  • Note that when a USP error occurs and it is canceled by a reset from a [RS]		nd	USP FW CM1 5 4 3 2 1 P24							

- terminal input, the inverter restarts running immediately.
- Even when the trip state is canceled by turning the terminal [RS] on and off after an under voltage protection E09 occurs, the USP function will be performed.
- When the running command is active immediately after the power is turned on, a USP error will occur. When this function is used, wait for at least three seconds after the power up to generate a Run command.

#### Software Lock [SFT]

• When the terminal [SFT] is turned on, the data of all the parameters and functions except the output frequency is locked (prohibited from editing).

When the data is locked, the keypad keys cannot edit inverter parameters. To edit parameters again, turn off the [SFT] terminal input.

Use parameter B31 to select whether the output frequency is excluded from the lock state or is locked as well.

Option Code	Terminal Symbol	Function Name	Input State	Description								
12	SFT	Software Lock	ON	The keypad and remote programming devices are prevented from changing parameters								
12	351	Software Lock	OFF	The parameters may be edited and stored								
Valid for	rinputs:	C01,C02,C03,C0	4,C05	Evample:				Example:				
Require	d setting	B09 (excluded fro	m lock)	SFT FW								
Notes:	Notes:				C M 1	5	4	3	2	1	P24	
<ul> <li>When the [SFT] terminal is turned on, only the output frequency can be changed.</li> <li>Software lock can be made possible also for the output frequency by b09.</li> <li>Software lock by the operator is also possible without [SFT] terminal being used (b09)</li> </ul>						S	sw3/	\$	SW1/		1	

#### **Analog Input Current / Voltage Select [AT]**

• The [AT] terminal selects whether the inverter uses the voltage [O] or current [OI] input terminals for external frequency control.

When the switch between the terminals [AT] and [CM1] is on, it is possible to set the output frequency by applying a current input signal at [OI]-[L].

When the terminal is turned off, the voltage input signal at [O]-[L] is available.

Note that you must also set parameter A 01 = 1 to enable the analog terminal set for controlling the inverter frequency.

Option Code	Terminal Symbol	Function Name	Input State		Description						
12	٨٣	Analog Input	ON	Terminal OI is enabled for current input. (uses terminal L for power supply return)							
13	AT	Voltage/current select	OFF Terminal O is enabled for voltage input. (uses terminal L for power supply return)								
Valid for	for inputs: C01,C02,C03,C04,C05		Example:								
Require	d setting	A01=01									
Notes:	Notes:			AT							
<ul> <li>If the [AT] option is not assigned to any intelligent input terminal, then inverter uses the algebraic sum of both the voltage and current inputs for the frequency command(and A01=01)</li> <li>When using either the analog current and voltage input terminal, make sure that the [AT] function is allocated to an intelligent input terminal.</li> <li>Be sure to set the frequency source setting A01=01 to select the analog input terminals.</li> </ul>				CM1	5 SW5/	4	3	2	1	P24	

#### Reset Inverter [RS]

 The [RS] terminal causes the inverter to execute the reset operation. If the inverter is in Trip Mode, the reset cancels the Trip state. When the switch between the set terminals [RS] and [CM1] is turned on and off, the inverter executes the reset operation.

• Even when power is turned off or on, the function of the terminal is the same as


• The Stop/Reset key on the inverter is only operational for a few seconds after inverter power up when a hand-held remote operator is

• If the [RS] terminal is turned on while the motor

that of the reset terminal.

connected to the inverter.

is running, the motor will be free running(coasting)

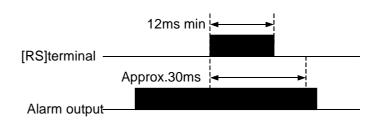

• The input timing requirement for [RST] needs a 12 ms pulse width or greater.

The alarm output will be cleared within 30 ms after the onset of the Reset command.



After the Reset command is given and the alarm reset occurs, the motor will restart suddenly if the Run command is already active.

Be sure to set the alarm reset after verifying that the Run command is off to prevent injury to personnel.

Option Code	Terminal Symbol	Function Name	Input State	Description		
14	RS	Reset Inverter	ON	The motor output is turned off, the trip Mode is cleared (if it exists), and power up reset is applied		
14	Ro	Reset inverter	OFF	Normal power-on operation		
Valid for inputs: C01,C02,C03,C04,C05			1,C05	Example:		
Required setting (none)				2 Zampie.		
Required setting (none)  Notes:  • When the control terminal [RS] input is already at power up for more than 4 seconds, the display of the digital operator is E60.  However, the inverter has no error.  To clear the digital operator error, turn off the terminal [RS] input and press stop/reset butt on of the operator.  • When the [RS] terminal is turned off from on, the Reset command is active.  • The stop/reset key of the digital operator is valid only when an alarm occurs.  • Only the normally open contact [NO] can be set for a terminal configured with the [RS] function.		off the et butt on rom on, ator is valid can be set	RS  CM1 5 4 3 2 1 P24  SW4			

N700E INSTRUCTION MANUAL	
	16

## **3.3** Intelligent Output Terminal Function

### **Intelligent Output Terminal [AL1, AL2-AL0]**


The alarm output terminals are connected as shown below by default, or after initialization.

The contact logic can be inverted by using the parameter setting C16.

The relay contacts normally contact a.

Convention uses "normal' to mean the inverter has power and is in Run or Stop Mode.

The relay contacts switch to the opposite position when it is Trip Mode or when input power is off.

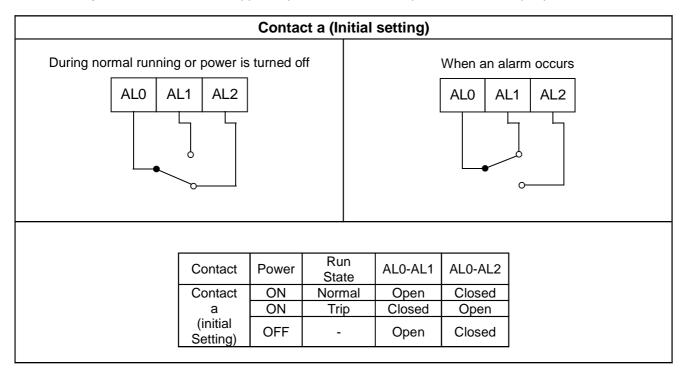

#### **Contact specification**

Maximum	Minimum
AC250V, 2.5A(Resistor load), 0.2A(Inductive load)	AC100V, 10mA
DC30V, 3.0A(Resistor load), 0.7A(Inductive load)	DC5V, 100mA

#### 3.4 Sensorless Vector Control

#### **Function description**

The N700E inverter has a built-in auto-tuning algorithm.

The N700E inverter can be possible to do high-starting torque and high-precision operation.

The required torque characteristic or speed control characteristic may not be maintained in case that the inverter capacity is move than twice the capacity of the motor in use .

#### **Function setting method**

Select the parameter A31 to 2 (sensorless vector control).

Parameter H03 and H04 select motor capacity and poles (example 4 for 4-poles).

Parameter H02 selects which data(standard data, auto-tuning data) of motor constants you want the inverter to use.

#### **3.5** Auto-tuning

#### **Function description**

The auto-tuning procedure automatically sets the motor parameter related to sensorless vector control. Since sensorless vector control needs motor parameter, the standard motor parameters have been set at the factory.

Therefore, when an inverter exclusive-use motor is used or when a motor of any other manufacture is drive, the motor parameter is detected by auto-tuning because the parameters are not matched.

#### **Function setting**

Follow the steps below to auto-tune the inverter, finally set the parameter H01.

F02, F03 setting: Set the time the range that over-current or over-voltage trip event not occurs. Set the same as setting F02.

H03 setting: Set the motor rating.

00.4L: 220V / 0.4kW 00.7L: 220V / 0.75kW 01.5L: 220V / 1.5kW 02.2L: 220V / 2.2kW 03.7L: 220V / 3.7kW 05.5L: 220V / 5.5kW 00.4H: 380V / 0.4kW 00.7H: 380V / 0.75kW 01.5H: 380V / 1.5kW 02.2H: 380V / 3.7kW 03.7H: 380V / 5.5kW

H04 setting : set the motor poles

A01 setting : set the frequency command source to 0 (potentiometer)


A03 setting : set the base frequency(example 60Hz)

F01 setting: set the operation frequency except 0hz (by the potentiometer)

A53 setting: select output voltage for motor.
A33 setting: set DC braking setting to 0(disable).
H01 setting: select the auto-tuning mode (1).

After setting above parameters, press the RUN key on the standard operator.

## **Auto-tuning method**

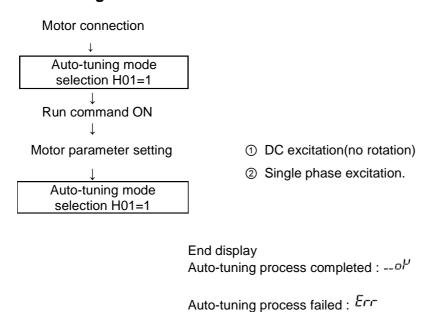

Note) The motor parameter of N700E is standard data of HYUNDAI standard 4-poles motor. At the sensorless vector control when using different poles motor, operates by using auto-tuning data as a motor parameter.

# **Setting Method**

(1)Digital panel

No	Name	Setting range	Description
H01	Auto-tuning mode selection	0/1	0 : Auto-tuning OFF 1 : Auto-tuning ON
H02	Motor data setting	0/1	0 : Standard data 1 : Auto-tuning data
H03	Motor capacity	00.4L ~ 05.5H	00.4L: 220V / 0.4kW 0.07L: 220V / 0.75kW 01.5L: 220V / 1.5kW 02.2L: 220V / 2.2kW 03.7L: 220V / 3.7kW 05.5L: 220V / 5.5kW 00.4H: 380V / 0.4kW 0.07H: 380V / 0.75kW 01.5H: 380V / 1.5kW 02.2H: 380V / 3.7kW 05.5H: 380V / 5.5kW
H04	Motor poles	2/4/6/8	Unit : pole
H05	Rating motor current	0.1 – 50.0A	Unit : A
H06	Nomal motor current	0.1 – 50.0A	Unit : A
H07	Rating motor slip	0.01 – 10.00%	Unit: %
H08/H10	Motor resistor R1	0.001~30.00	Unit : Ω
H09/H11	Transient Inductance	0.01~100.0	Unit : mH

The data of H10 to H11 is auto-tuning data.

#### Remark

1. If satisfactory performance through auto-tuning cannot be fully obtained, please adjust the motor constants for the observed symptoms according to the table below.

Operation status	Symptom	Adjustment	Parameter
Deviewed	When low frequency (a few Hz) torque is insufficient.	Slowly increase the motor constant R1 in relation to auto-tuning data within 1 to 1.2 times R1.	H08/H10
Powered running	When the speed deviation is negative.	Slowly increase the motor constant R2 in relation to auto-tuning data within 1 to 1.2 times R2.	H07/H12
(status with a accelerating torque)  When the speed deviation is positive		Slowly decrease the motor constant R2 in relation to auto-tuning data within 0.8 to 1 times R2.	H07/H12
torque)	When over current protection is operated at injection of load.	Slowly increase the motor constant IO in relation to auto-tuning data within 1 to 1.2 times IO.	H06
Regeneration When low frequency		Slowly increase the motor constant R1 in relation to auto-tuning data within 1 to 1.2 times R1.	H08/H10
(status with a decelerating torque)	(a few Hz) torque is insufficient.	Slowly increase the motor constant IO in relation to auto-tuning data within 1 to 1.2 times IO.	H06
		Decrease the carrier frequency.	b11

- 2. If the inverter capacity is more than twice the capacity of the motor in use, the inverter may not achieve its full performance specifications.
- 3. When DC braking is enabled, the motor constant will not be accurately set. Therefore, disable DC braking before starting the auto-tuning procedure.
- 4. The motor will rotate up to 80% of base frequency: make sure that accele-ration or deceleration is not operated. If then, decrease the manual torque boost setting value.
- 5. Be sure if motor is in standstill before you carry out an auto-tuning. Auto-tuning data carried out when motor is still running may be not correct.
- 6. If the auto-tuning procedure is interrupted by the stop command, the auto-tuning constants may be stored in the inverter. It will be necessary to store the inverters factory defaults setting.

# 4. Protective function

The various functions are provided for the protection of the inverter itself, but they may also protection function when the inverter breaks down.

Name	Cause(s)	Error Code
Over current protection	When the inverter output current exceeds the rated current by more than approximately 200% during the motor locked or reduced in speed. Protection circuit activates, halting inverter output.	E04
Overload protection (Electronic thermal) Regenerative	When the inverter output current causes the motor to overload, the electronic thermal trip in the inverter cuts off the inverter output.	E05
Over voltage protection	If regenerative energy from the motor or the main power supply voltage is high, the protective circuit activates to cut off the inverter output when the voltage of DC link exceeds the specification	E07
Communication error	The inverter output is cut off when communication in the inverter has an error to external noise, excessive temperature rise, or other factor	E60
Under-voltage protection	When input voltage drops below the low-voltage detection level, the control circuit does not function normally.  So when the input voltage is below the specification, the inverter output is cut off.	E09
Output short-circuit	The inverter output was short-circuited. This condition causes excessive current for the inverter, so the inverter output is turned off.	E04 or E34
USP error	The USP error is indicated when the power is turned on with the Inverter in RUN state. (Enabled when the USP function selected)	E13
EEPROM	The inverter output is cut off when EEPROM in the inverter has an error due to external noise, excessive temperature rise, or other factor	E08
External trip	When the external equipment or unit has an error, the inverter receives the corresponding signal and cuts off the output.	E12
Temperature trip	When the temperature in the main circuit increases due to cooling fan stop, the inverter output is cut off.  (only for the model type with cooling fan)	E21
Ground fault	When ground fault is detected on running condition, the output is cut off.	E14
Inverter Overload	The power device IGBT is protected from over heat. The operating time of inverter is 1 minute with 150% load.  The operating time is changed depending on carrier frequency, load, ambient temperature and power rating.	E17
Input phase loss	A function that detects phase loss in the input AC source.  Detection is performed using the fluctuation in the main circuit's DC voltage. Also, in the case of degradation in the main capacitor it could be occurred where maintenance replacement is required.	E20

# Other display

Contents	Display
It is displayed when initialization of data is processing (It is not displayed when initialization of history is processing.)	 b 12
It is displayed when Copy function is operated by the remote operator.	СОРУ
There is no data available (Trip history, PID feedback data)	
The auto-  RED2  ion terminates normally.	

# **5. Troubleshooting Tips**

Sympto	om/condition	Probable Cause	Countermeasure
		<ul> <li>Is the frequency command source A01 parameter setting Correct?</li> <li>Is the Run command source A02 parameter setting correct?</li> </ul>	<ul> <li>Make sure the parameter A01 setting correct?</li> <li>Make sure the parameter A02 setting correct?</li> </ul>
The motor will not move		Is power being supplied to terminals     R, S and T?     If so, the power lamp should be on.	<ul> <li>Check terminals R, S and T then U, V, and W</li> <li>Turn on the power supply or check fuses.</li> </ul>
	The inverter	• Is there an error code E□□displayed?	Press the Func key and determine the error type. Then clear the error(Reset).
	outputs U,V and W are not supplying voltage.	<ul> <li>Are the signals to the intelligent input terminals correct?</li> <li>Is the Run Command active?</li> <li>Is the[FW] terminal (or [RV] connected to CM1(via switch, etc.)</li> </ul>	Verify the terminal functions for C01-C06 are correct. Turn on Run Command Supply 24V to [FW] or [RV] terminal, if configured. (Terminal mode selection)
		<ul> <li>Has the frequency setting for F01 been set greater than zero?</li> <li>Are the control circuit terminals H, O, and L connected to the potentiometer?</li> </ul>	<ul> <li>Set the parameter for F01 to a safe, non-zero value.</li> <li>If the potentiometer is the frequency setting source, verify voltage at "O" &gt; 0V</li> </ul>
		Is the RS(reset) function or FRS     (free-run stop) function on?	Turn off the command(s)
	Inverter outputs U,V,W are supplying voltage.	<ul><li>Is the motor load too heavy?</li><li>Is the motor locked?</li></ul>	Reduce load, and test the motor independently.
The direction of the motor is reversed		<ul> <li>Are the connections of output terminal U, V, and W correct?</li> <li>Is the phase sequence of the motor forward or reverse with respect to U, V, and W?</li> </ul>	Make connections according to the phase sequence of the motor. In general : FWD=U-V-W, and REV=U-W-V.
		<ul> <li>Are the control terminals</li> <li>[FW] and [RV]wired correctly?</li> <li>Is parameter F04 properly set?</li> </ul>	<ul> <li>Use terminal [FW] for [RV] is reverse.</li> <li>Set motor direction in F04.</li> </ul>
The motor speed will not reach the target frequency (desired speed)		If using the analog input, is the current or voltage at "O" or "OI"?	<ul> <li>Check the wiring</li> <li>Check the potentiometer or signal generating device.</li> </ul>
		Is the load too heavy?	Reduce the load.     Heavy loads activate the overload restriction feature.     (reduces output as needed)
The rotation is unstable		<ul> <li>Is the load fluctuation too great?</li> <li>Is the supply voltage unstable?</li> <li>Is the problem occurring at a particular frequency?</li> </ul>	Increase the motor capacity (both inverter and motor) Fix power supply problem. Change the output frequency slightly, or use the jump frequency setting to skip the problem frequency.
	PM of the motor s not match	Is the maximum frequency setting     A04 correct?	Verify the V/F settings match motor specifications

# N700E INSTRUCTION MANUAL

the inverter output	Does the monitor function d01 display	Make sure all scaling is properly set
frequency setting	the expected output frequency?	

Symptor	m/condition	Probable Cause	Countermeasure
Inverter data is not correct	No down- loads have occurred.	Was power turned off after a parameter edit but before pressing the store key?     Edits to data are permanently stored at power down.     Was the time from power off to power on less than six seconds?	Edit the data and press the store key once     Wait six seconds or more before turning power off after editing data.
A parameter will not change after an edit	The frequency setting will not change. Run/Stop does not operate.	Was the standard operator mode and terminal mode changed correctly?	• Make sure the setting mode of [A01], [A02] is changed
(reverts to old setting)	True for all parameters.	<ul> <li>If you're using the[SET] intelligent input selection [b09] is the [SFT]</li> <li>Is switch 4(located on the back of the remote operator copy unit) on?</li> </ul>	<ul> <li>Change the state of the SFT input, and check the b09 parameter. (b09=0)</li> <li>Turn the switch off</li> </ul>

#### Precautions for data setting

When changing any set data and pressing (STR) key to store the data, keep the equipment un-operated for 6 seconds or more after the selected method is executed.

When any key is pressed, or the reset operation is performed, or the power is turned off within 6 seconds, correct data may not be set.

# 6. Maintenance and Inspection

Please read following safety messages before troubleshooting or performing maintenance on the inverter and motor system.

### **DANGER**

• Wait at least five(5) minutes after turning off the input power supply before performing maintenance of an inspection.

Otherwise, there is the danger of electric shock.

• Make sure that only qualified personnel will perform maintenance, inspection, and part replacement. (Before starting to work, remove any metallic objects from your person (wristwatch, bracelet, etc.))

Be sure to use tools with insulated handles.

Otherwise, there is a danger of electric shock and/or injury to personnel.


#### **6.1** General Precautions and Notes

- Always keep the unit clean so that dust of other foreign matter does not enter the inverter.
  - Take special care in regard to breaking wires of making connection mistakes.
  - Firmly connect terminals and connectors.
  - Keep electronic equipment away from moisture and oil. Dust, steel filings and other foreign matter can damage insulation, causing unexpected accidents, so take special care.
  - When removing connectors, never pull the wires(wires for the cooling fan and logic P.C. board.) Otherwise, there is danger of fire due to wire breakage and/or injury to personnel.

#### **6.2** Inspection Items

- (1) Daily inspection
- (2) Periodic inspection(approximately once a year)
- (3) Insulation resistance test(approximately once two years)

Conduct the insulation resistance test by short circuiting the terminals as shown below.

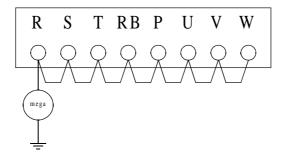

• Never test the withstand voltage on the inverter.

The inverter has a surge protector between the main circuit terminals and the chassis ground.

We recommend that you stock spare parts to reduce down time, which include

Spare parts

Dout description	Cumbal	Quantity		Nata
Part description	Symbol	Used	Spare	Note
Cooling FAN	FAN	1	1	1
Case		1	1	Front case Main case Bottom cover

- Monthly and Yearly Inspection Chart

Item Inspected		Check for	Inspection		Inspection Method	Criteria	
	<u> </u>		Month	Year	'		
	Ambient environment	Extreme temperatures & humidity	v		Thermometer, hygrometer	Ambient temperature between -10 to 40°C, non-condensing	
Overall	Major devices	Abnormal vibration noise	v		Visual and aural	Stable environment for electronic controls	
	Power supply insulation	Voltage tolerance	v		Digital volt meter, measure between inverter terminals R, S, T	200V class: 200 to 240V 50/60Hz 400V class: 380 to 480V 50/60Hz	
	Ground Insulation	Adequate resistance		v	Digital volt meter, GND to terminals	500V class Mega ohm meter	
	Mounting	No loose screws		V	Torque wrench	• M3:0.5~0.6Nm • M4:0.98~1.3Nm • M5:1.5~2.0Nm	
	Components	Overheating		v	Thermal trip events	No trip events	
	Housing	Dirt, dust		v	Visual	Vacuum dust and dirt	
Main circuit	Terminal block	Secure connections		v	Visual	No abnormalities	
Main	Smoothing capacitor	Leaking swelling	v		Visual	No abnormalities	
	Relay(s)	Chattering		V	Aural	Single click when switching On or Off	
	Resistors	Cracks or discoloring		V	Visual	Use Ohm meter to check braking resistors	
	Cooling FAN	Noise	v		Power down, manually rotate	Rotation must be smooth	
	· ·	Dust	v			Vacuum to clean	
Control	Overall	No odor, discoloring corrosion		v	Visual	No abnormalities	
GIIGUIL	Capacitor	No leaks or deformation	v		Visual	Undistorted appearance	
Display	LEDs	Legibility	٧		Visual	All LED segments work	

Note1: The life of a capacitor is affected by the ambient temperature.


Note2: The inverter must be cleaned periodically.

If dust accumulates on the fan and heat sink, it can cause overheating of the inverter.

#### **6.3** General Inverter Electrical Measurements

The following table specifies how to measure key system electrical parameters.

The diagrams on the next page show inverter-motor systems the location of measurement points for these parameters.

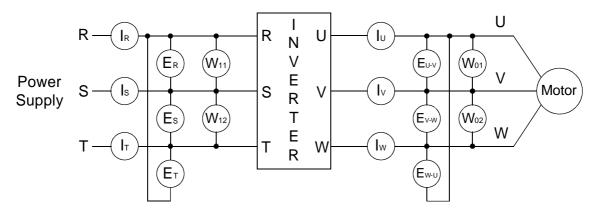

Parameter	Circuit location of measurement	Measuring instrument	Notes	Reference Value
Š Supply voltage E1	R-S, S-T, T-R (ER) (ES) (RT)	Moving-coil type voltmeter or rectifier  → type voltmeter	Fundamental wave effective value	Commercial supply voltage (200V class) 200-220V 5Hz 200-240V 6Hz
Supply current	R, S, T, Current (IR) (IS) (IT)	Moving-coil type Ammeter	Total effective value	(400Vclass) 380-415V 5Hz 400-480V 6Hz
Supply power W1	R-S, S-T (W11) + (W12)	Electronic type wattmeter	Total effective value	
Supply power factor Pf1	Calculate the output output current I <sub>1</sub> , and			
Output voltage E0	U-V, V-W, W-U (EU) (EV) (EW)	→ Rectifier type voltmeter	Total effective value	
	U, V, W Current (IU) (IV) (IW)	Moving-coil type  Ammeter	Total effective value	
Output power	U-V, V-W	Electronic type	Total effective	
Output power factor Pf0	Output power factor  Output power factor  Output power  factor  Output power  Output p			

Note 1: Use a meter indicating a fundamental wave effective value for voltage, and meters indicating total effective values for current and power.

Note 2: The inverter output has a PWM waveform, and low frequencies may cause erroneous readings.

However, the measuring instruments and methods listed above provide comparably accurate results.

Note 3: A general-purpose digital volt meter (DVM) is not usually suitable to measure a PWM waveform (not pure sinusoid)

# 7. RS485 Communication (Option)

The communication between inverter and external controller is doing by RS485 using modular connector in cling to inverter controller.

Function code	Minimum	Maximum	Initial Value	Unit	Description
b17	1	32	1	-	Setting the communication number
A01	0	3	0	-	3 : Communication
A02	0	2	0	_	2 : Digital operator


Item	Description	Remark
Interface	RS485	
Communication method	Half duplex	
Communication speed	9600	Fixing
Communication code	Binary code	
Data bits	8	Fixing
Parity	No.	Fixing
Stop bit	1	Fixing
Starting method	External request	Inverter is only slave part.
Wait time	10~1000ms	
Connection type	1 : N (Max32)	Communication acceptor in
Error check	Frame / CRC / CMD /	Communication number is
	MAXREQ / parameter	selected at b17

#### **RS485**

DOP	RXP	RXN	CM1
24V	Transmit/Receive +side	Transmit/Receive -side	24V GND

#### **Communication sequence**

The communication sequence is as follows

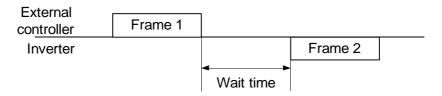

Frame start: Frame start is recognized by signal line data transmitted.

Frame completion: Frame completion is recognized by no data during correspond 4, 5-character time.

Frame 1: Transmit from external controller to inverter.

Frame 2: Indication reflects from inverter to external controller

## Communication frame type and form

External controller transmit frame

Communication	Command	Doromotor	Doromotor Count	CRC Hi	CRC Lo
number	Command	Parameter	Parameter Count	CKC III	CRC LO

	Description	Data size	Specifications
Communication number	Inverter Communication number	1 byte	1~32
Command	Frame type	1 byte	0x03
Parameter	Parameter	2 byte	1 <sup>st</sup> byte : Group 2 <sup>nd</sup> byte : Index (note1)
Parameter number	Request parameter number	2 byte	1 <sup>st</sup> byte : 0x00 2 <sup>nd</sup> byte : N(0x01~0x08)
CRC Hi	-	1 byte	Higher 8bit of 16bit CRC
CRC Lo	-	1 byte	Lower 8bit of 16bit CRC

Inverter response frame

Communication number	Order	Byte Number	Data 1	••••	Data N	CRC Hi	CRC Lo	1
----------------------	-------	----------------	--------	------	--------	--------	--------	---

	Description	Data size	Specifications
Communication number	Inverter Communication number	1 byte	1~32
Command	Frame type	1 byte	0x03
Byte Number	Data Byte number	1 byte	Request parameter number x 2
Data 1	Parameter 1	2 byte	Parameter value
Data N	Parameter N	2 byte	Nth parameter value
CRC Hi	-	1 byte	Higher 8bit of 16bit CRC
CRC Lo	-	1 byte	Lower 8bit of 16bit CRC

<sup>\*</sup> Frame Size = 5 + Request parameter number x 2

External transmit frame

Communication	Ordor	Parameter	Data	CDC Hi	CPCIA
number	Order	Parameter	Dala	CRC III	CKC LU

	Description	Data size	Specifications
Communication number	Target Inverter Communication number	1 byte	1~32
Command	Frame type	1 byte	0x06
Parameter	Parameter	2 byte	1 <sup>st</sup> byte : Group 2 <sup>nd</sup> byte : Index (Note1)
Data	Data	2 byte	Setting value(Note 2)
CRC Hi	=	1 byte	Higher 8bit of 16bit CRC
CRC Lo	-	1 byte	Lower 8bit of 16bit CRC

Inverter response frame

Communication	Order	Doromotor	Doto	CRC Hi	CDC Lo
number	Order	Parameter	Data	CRC HI	CRC LO

	Description	Data size	Specifications
Communication number	Target Inverter Communication number	1 byte	1~32
Command	Frame type	1 byte	0x06
Parameter	Parameter	2 byte	1 <sup>st</sup> byte : Group 2 <sup>nd</sup> byte : Index (Note1)
Data	Data	2 byte	Setting value is response (Note4)
CRC Hi	-	1 byte	Higher 8bit of 16bit CRC
CRC Lo	-	1 byte	Lower 8bit of 16bit CRC

#### (Note1) Parameter setting

#### Basic parameter

1st byte: Each group is setting

•	<u> </u>	,		
	Group	1 <sup>st</sup> byte	Group	2 <sup>nd</sup> byte
	d	0x01	С	0x05
	F	0x02	Н	0x06
	Α	0x03		
	b	0x04		

2<sup>nd</sup> byte: Parameter number setting.

Ex) The case of A60 parameter reading or writing

1<sup>st</sup> byte : 0x03 2<sup>nd</sup> byte : 0x3C

#### Trip information

Trip information is 4 parameter.(output frequency, output current, DC link voltage at trip occurs)

	Trip Information	Previous first trip	Previous second trip	Previous third trip	Trip count
1st byte	0x01	0x01	0x01	0x01	0x01
2 <sup>nd</sup> byte	0x0D	0x11	0x15	0x19	0x1D

#### Trip information items

Trip data	Trip contents	Trip data	Trip contents
1	Over current trip	8	Outside trip
2	Over voltage trip	9	EEPROM trouble
3	Under voltage trip	10	Communication trouble
4	Arm Short trip	11	USP trip
5	Reserved	12	GF trip
6	Inverter over heat trip	15	Input phase loss
7	Electric thermal trip		

#### (Note2) Data value setting

Data value is transmitted except decimal point.

Ex1) Output frequency

Parameter value	Communication data	Conversion hexadecimal
60.0Hz	6000	1 <sup>st</sup> byte : 0x17 2 <sup>nd</sup> byte : 0x70

Ex2) acc/dec time

1 <sup>st</sup> byte : 0x00 2 <sup>nd</sup> byte : 0x64

#### (Note3) Special parameter

Run command

Parameter

1<sup>st</sup> byte : 0x00 2<sup>nd</sup> byte : 0x02 setting data

1st byte

•	2,10							
	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Reserved								

2<sup>nd</sup> byte

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
	Reserved				RST	REV	FWD

Bit 0 : Forward command Bit 1 : Reverse command Bit 2 : Reset command

#### Frequency command

Parameter

1<sup>st</sup> byte : 0x00 2<sup>nd</sup> byte : 0x04 setting data

output frequency \* 100

Ex) the case of output frequency command is 60.00Hz

Data 6000 transmit

1<sup>st</sup> byte : 0x17 2<sup>nd</sup> byte : 0x70

#### 16bit CRC generation

The step of CRC generation is as follows:

- 1. All of 16-bit register is 1.0xffff
- 2. The exclusive OR of 16-bit register and 8-bit register.
- 3. Shift right side 1bit 16-bit register
- 4. If the result of step 3 is 1, exclusive OR 16-bit register and 0xa001.
- 5. Execute 8 times step 3 and step 4.
- 6. Execute step 2~6 until data completion.
- 7. Exchange the step 6 result of higher 8bit and lower 8bit.

Ex) The case of D01 output frequency reading.

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
Communication Number	Command	Para	Parameter Parameter number		er number
0x01	0x03	0x01	0x01	0x00	0x01

#### The sequence of addition Byte(01x01)

16-BIT REGISTE	М	SB			Flag	
(Exclusive OR)		1111	1111	1111	1111	
01		0000	0001			
		1111	1111	1111	1110	
Shift 1	0111	1111	1111	1111		
Shift 2	0011	1111	1111	1111	1	
Polynomial		1010	0000	0000	0001	
		1001	1111	1111	1110	
Shift 3	0100	1111	1111	1111		
Shift 4	0010	0111	1111	1111	1	
Polynomial		1010	0000	0000	0001	
		1000	0111	1111	1110	
Shift 5	0100	0011	1111	1111		
Shift 6	0010	0001	1111	1111	1	
Polynomial		1010	0000	0000	0001	
		1000	0001	1111	1110	
Shift 7	0100	0000	1111	1111		
Shift 8	0010	0000	0111	1111	1	
Polynomial		1010	0000	0000	0001	
		1000	0000	0111	1110	

Byte 1~6	CRC of operation results		
0x01	0x807e		
0x03	0x3364		
0x01	0x30e1		
0x01	0x8831		
0x00	0xd449		
0x01	0x36d4		

Change upper and lower 8 bit of result 0x36d4 : 0xd436

Byte7: Upper 8 bit of CRC = 0xd4 Byte8: Lower 8 bit of CRC = 0x36

# 8. Specification

# 8.1 Standard specification list

(1) 200V Class Specifications

(1) 2007 Glass openinoations											
Inverter Model		N700E- 004SF	N700E- 007SF	N700E- 015SF	N700E- 022SF	N700E- 004LF	N700E- 007LF	N700E- 015LF	N700E- 022LF	N700E- 037LF	
Max. Applicable motor (4P, kW) (Note2)		0.4	0.75	1.5	2.2	0.4	0.75	1.5	2.2	3.7	
Rated	200V	1.0	1.7	2.4	3.8	1.0	1.7	2.4	3.8	5.9	
capacity (kVA)	240V	1.2	2.1	2.9	4.6	1.2	2.1	2.9	4.6	7.1	
Rated input	Rated input voltage		Single-phase(2-wires) 200~240V±10%, 50/60Hz±5%				Three-phase(3-wires) 200~240V±10%, 50/60Hz±5%				
Rated output voltage (Note3)		Three-phase 200~240V (corresponding to input voltage)									
Rates outpu	t current (A)	3 5 7 11 3 5 7 11 17						17			
Dynamic braking	Regenerative control										
approx. % torque, short time stop	Min. resistive to be connected (Ω)	100	100	50	50	100	100	50	50	35	
Weight (Kg)		0.7 0.7 0.7 0.98 0.7 0.7 0.7 0.98 1.2						1.2			

(2) 400V Class Specifications

Inverter Model		N700E- 004HF	N700E- 007HF	N700E- 015HF	N700E- 022HF	N700E- 037HF		
Max. Applicable motor (4P, kW) (Note2)		0.4	0.4 0.75 1.5		2.2	3.7		
Rated	380V	1.2	2.2	3.2	4.7	6.1		
capacity (kVA)	480V	1.5	2.8	4.0	6.0	7.6		
Rated input voltage		Three-phase(3-wires) 380~480V±10%, 50/60Hz±5%						
Rated outp	ut voltage (Note3)	Three-phase 380~480V (corresponding to input voltage)						
Rates outp	ut current (A)	1.8 3.4 4.8 7.2 9.2						
Dynamic braking	Regenerative control	BRD circuit built-in (The discharge resistance is optional)						
approx. % torque, short time stop	Min. resistive to be connected $(\Omega)$	180	180	180	100	100		
Weight (Kg	)	0.98	0.98	0.98	0.98	1.2		

(3) Common specification for 200V/400V class

(3)	(3) Common specification for 200V/400V class							
Inverter model			Common specification for all model  Space vector modulation PWM system					
Control system		•	Space vector modulation PWM system					
Output frequency range (Note4)			0.01~400Hz					
	Frequency (Not		Digital command ±0.01% for Max. frequency, analog frequency ±0.1% (25±10°C)					
	Frequency pov	-	Digital setting : 0.01HZ, Analog setting : Max. frequency / 1,000					
	Voltage/fr charac		V/f control (constant torque, reduced torque), free V/f control					
	Overload c	urrent rate	150%, 60sec					
	Accele Decele		0.01~3000.0 sec (Director, curve setting)					
	DC Br	aking	On starting and decelerating by stop command, inverter operates under operation setting frequency. Or inverter operates with external input (Breaking power, time, frequency can be set.)					
	Freque ncy	Operator Extend signal	Setting by up/down key Input voltage : DC0~+10V (Input impedance 10KΩ) Input current : 4~20mA (Input impedance 250Ω)					
Input Signal	Run/ Stop	Operator Extend signal	Run / Stop key (Forward / Reverse function mode) Forward run / stop (1a connect, 1b selection possibility)					
inaul	Intelligent input terminal		FW(Forward), RV(Reverse), CF1~4(Multi-speed bit 1~4), RS(reset), AT(Analog input change), USP(USP function) EXT(external trip), FRS(free-run stop), JG(jogging), SFT(software lock), STA(start), STP(stop), F/R(forward/reverse) UP(remote control UP), DOWN(remote control DOWN)					
Signal	Frequency monitor		Frequency monitor		Analog meter (DC0~10V full scale. Max · 1mA) Output frequency, output current and output voltage			
Output	Intelligent output contact		OFF for inverter alarm(normally closed contact output) (Transition to ON for alarm)/Intelligent output Terminal					
	Other functions		AVR function, curved accel/decel. profile, upper and lower limiters,  16-stage speed profile, fine adjustment of start frequency, carrier frequency change(0.5 to 16Khz), frequency jump, gain and bias s process jogging, electronic thermal level adjustment, retry function,		16-stage speed profile, fine adjustment of start frequency, carrier frequency change(0.5 to 16Khz), frequency jump, gain and bias setting, process jogging, electronic thermal level adjustment, retry function, trip history monitor, auto tuning, V/f characteristic selection, Speed Search			

Protection function		Over current, Over load(Electronic thermal), Over voltage, Communication error, Under voltage, Output short circuit detection, USP error, EEPROM error, External error, Ground fault, Over heat, Input phase loss		
Ambient temperature		-10~50°C (If ambient temperature is above 40°C, Carrier frequency should be lower than 2.0 kHz.)		
Standard te specifica-	Storage temperature	-20~60°C		
	Ambient humidity	Below 90%RH (Installed with no dew condensation)		
	Vibration	5.9m/s²(0.6G). 10~55Hz		
	Location	Under 1000m above sea level, indoors (Installed away from corrosive gasses dust)		
Option		Noise filter , DC reactor, AC reactor		
		Remote operator, cable for remote operator,		
		Braking resistor		


#### Footnotes for the preceding tables

- 1. The protection method conforms to JEM 1030.
- 2. The applicable motor refers to HYUNDAI standard 3-phase motor(4-pole).


  To use other motors, care must be taken to prevent the rated motor current(50/60Hz) from exceeding the rated output current of the inverter.
- 3. The output voltage decreases as the main supply voltage decreases (except for use of the AVR function). In any case, the output voltage cannot exceed the input power supply voltage.
- 4. To operate the motor beyond 50/60Hz, consult the motor manufacturer about the maximum allowable rotation speed.
- 5. The braking torque via capacitive feedback is the average deceleration torque at the shortest deceleration (stopping from 50/60Hz as indicated).
- It is not continuous regenerative braking torque.
- And, the average deceleration torque varies with motor loss.
- This value decreases when operating beyond 50 Hz.
- If a large regenerative torque is required, the optional regenerative braking resistor should be used.
- 6. Control method setting A31 to 2 (sensorless vector control) Selected, set carrier frequency setting b11 more than 2.1kHz.

## 8.2 Dimension


(1) N700E-004LF/004SF/007LF/007SF/015LF model external dimension.(mm)

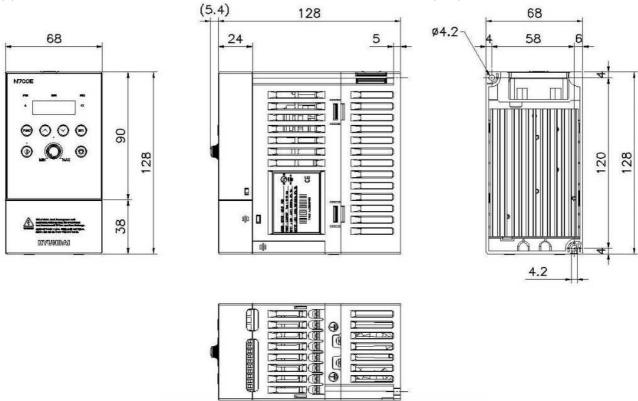



(2) N700E-015SF/004HF/007HF/015HF/022SF/022LF/022HF model external dimension.(mm)

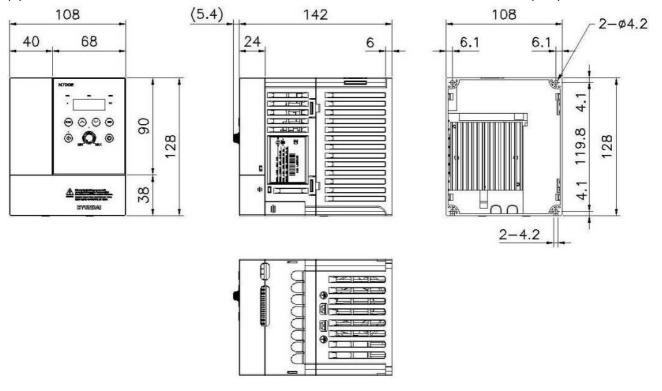


# (3) N700E-037LF/037HF model external dimension.(mm)

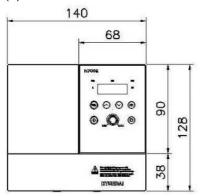

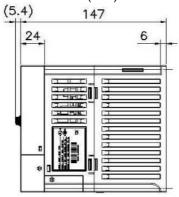

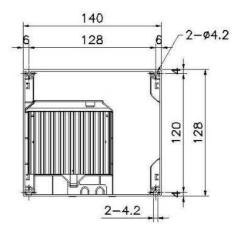

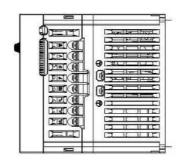

Model	W(Width) [mm]	W1 [mm]	H(Height) [mm]	H1 [mm]	D(Depth) [mm]	Ø [mm]	Weight [kG]
N700E 004 SF	68	58	128	120	128	4.2	0.7
N700E 007 SF	68	58	128	120	128	4.2	0.7
N700E 015 SF	108	96	128	120	142	4.2	0.7
N700E 022 SF	108	96	128	120	142	4.2	0.98
N700E 004 LF	68	58	128	120	128	4.2	0.7
N700E 007 LF	68	58	128	120	128	4.2	0.7
N700E 015 LF	68	58	128	120	128	4.2	0.7
N700E 022 LF	108	96	128	120	142	4.2	0.98
N700E 037 LF	140	128	128	120	147	4.2	1.22
N700E 004 HF	108	96	128	120	142	4.2	0.98
N700E 007 HF	108	96	128	120	142	4.2	0.98
N700E 015 HF	108	96	128	120	142	4.2	0.98
N700E 022 HF	108	96	128	120	142	4.2	0.98
N700E 037 HF	140	128	128	120	147	4.2	1.22